



## **GETTING STARTED GUIDE**



### **Catalyst 3560-E Switch Getting Started Guide**

- 1** About this Guide
- 2** Taking Out What You Need
- 3** Running Express Setup
- 4** Managing the Switch
- 5** Rack-Mounting
- 6** Connecting to the Switch Ports
- 7** In Case of Difficulty
- 8** Obtaining Documentation and Submitting a Service Request
- 9** Cisco Warranty Terms

# 1 About this Guide

This guide provides instructions on how to use Express Setup to initially configure your Catalyst switch. Also covered are switch management options, basic rack-mounting procedures, port and module connection procedures, and troubleshooting help.

For additional installation and configuration information for Catalyst 3560-E switches, see the Catalyst 3560-E documentation on Cisco.com. For system requirements, important notes, limitations, open and resolved bugs, and last-minute documentation updates, see the release notes, also on Cisco.com.

When using the online publications, refer to the documents that match the Cisco IOS software version running on the switch. The software version is on the Cisco IOS label on the switch rear panel.

For translations of the warnings that appear in this publication, see the *Regulatory Compliance and Safety Information for the Catalyst 3750-E and Catalyst 3560-E Switch* that accompanies this guide.

## 2 Taking Out What You Need


Follow these steps:

1. Unpack and remove the switch and the accessory kit from the shipping box.
2. Return the packing material to the shipping container, and save it for future use.
3. Verify that you have received the items shown on page 3. If any item is missing or damaged, contact your Cisco representative or reseller for instructions.

Some switch models might include additional items that are not shown on page 3.

4. For switches with the optional 1150-W power supply module (model C3K-PWR-1150WAC), install the power supply in the switch as described in the installation notes after you rack-mount the switch.

# Shipping Box Contents

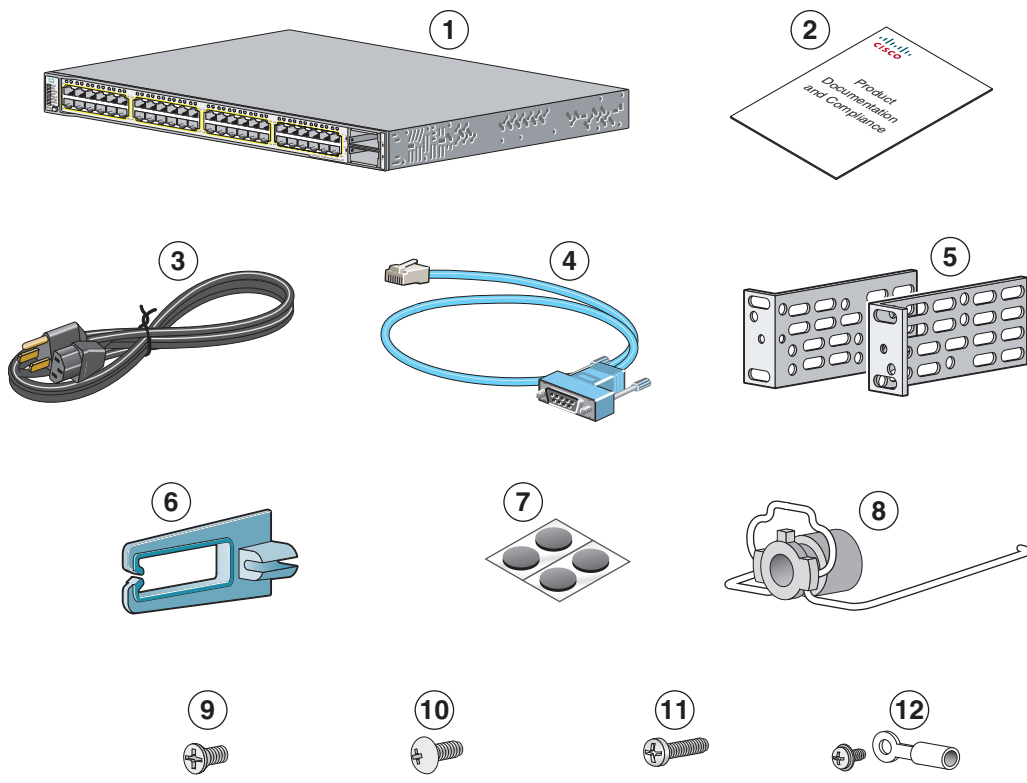

207382

<b>1</b>	Catalyst switch <sup>1</sup>	<b>7</b>	Four rubber mounting feet
<b>2</b>	Documentation	<b>8</b>	Power cord retainer
<b>3</b>	AC power cord	<b>9</b>	Twelve number-8 Phillips flat-head screws
<b>4</b>	Console cable (optional)	<b>10</b>	Four number-12 Phillips machine screws
<b>5</b>	Two 19-inch mounting brackets	<b>11</b>	One black Phillips machine screw
<b>6</b>	Cable guide	<b>12</b>	Ground lug screw and ring terminal

1. Catalyst 3560E-48 Power over Ethernet (PoE) switch shown for example. Your switch model might look different.

### 3 Running Express Setup

When you first set up the switch, you should use Express Setup to enter the initial IP information. Doing this enables the switch to connect to local routers and the Internet. You can then access the switch through the IP address for further configuration.



You need this equipment to set up the switch:

- A PC with Windows 2000 or XP installed
- A web browser (Internet Explorer 5.5, 6.0, Netscape 7.1 or later) with JavaScript enabled
- A straight-through or crossover Category 5 Ethernet cable to connect your PC to the switch


Disable any pop-up blockers or proxy settings in your browser software and any wireless client running on your PC.

As an example, the Express Setup illustrations show the Catalyst 3560E-48 PoE switch. You can run Express Setup on all Catalyst 3560-E switch models.

To run Express Setup:
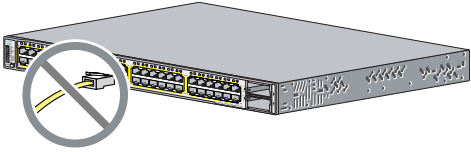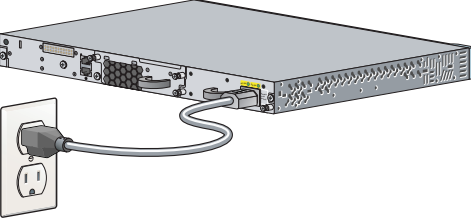
<p><b>Step 1</b> Make sure that nothing is connected to the switch.</p> <p>During Express Setup, the switch acts as a DHCP server. If your PC has a static IP address, change your PC settings before you begin to temporarily use DHCP.</p>	
<p><b>Step 2</b> Power the switch.</p> <p>For AC-powered switches, connect the AC power cord to the switch power supply and to a grounded AC outlet.</p> <p>For DC-powered switches, see the wiring instructions in the hardware installation guide on Cisco.com.</p>	
<p><b>Step 3</b> When the switch powers on, it begins the power-on self-test (POST). During POST, the LEDs blink while tests verify that the switch functions properly.</p> <p>Wait for the switch to complete POST, which can take several minutes.</p>	
<p><b>Step 4</b> Verify that POST has completed by confirming that the SYST LED remains green. If the switch fails POST, the SYST LED turns amber. See the “In Case of Difficulty” section on page 20 if your switch fails POST.</p>	

**Step 5** Press and hold the Mode button for 3 seconds. When all of the LEDs above the Mode button turn green, release the Mode button.

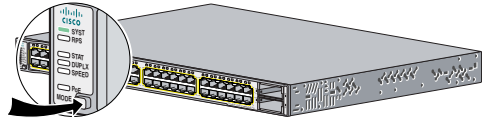


**Step 6** If the LEDs above the Mode button blink after you press the button, release it. Blinking LEDs mean that the switch is already configured and cannot go into Express Setup mode. For more information, see the “Resetting the Switch” section on page 21.

**Step 7** Verify that the switch is in Express Setup mode. Make sure that all LEDs above the Mode button are green. (On some switch models, the RPS LED remains off.)

**Step 8** Connect a Category 5 Ethernet cable to one of these locations:


- Any 10/100/1000 Ethernet port on the switch front panel (for switches with front-panel Ethernet ports).
- The Ethernet management port on the switch rear panel.

Connect the other end of the cable to the Ethernet port on your PC.

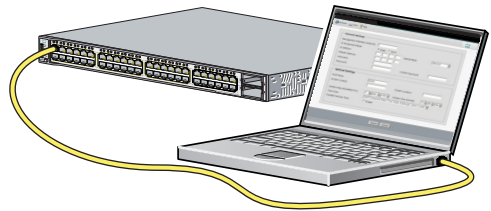

**Step 9** Verify that the LEDs on both Ethernet ports are green. Wait 30 seconds.

**Step 10** Launch a web browser on your PC. Enter the IP address 10.0.0.1 in the web browser, and press **Enter**.

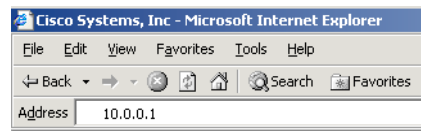

**Step 11** The switch prompts you for the default switch password. Enter the default password, *cisco*.

**Note** The switch ignores text in the username field.

---

**Step 12** The Express Setup Basic Settings page appears. If it does not appear, see the “In Case of Difficulty” section on page 20.

The screenshot shows the 'Basic Settings' tab of the Express Setup page. It is divided into three sections: Network Settings, Ethernet Management Port Settings, and Optional Settings. The Network Settings section has fields for Management Interface (VLAN ID) with a value of 1, IP Address, Subnet Mask (255.255.255.0), Default Gateway, Switch Password, and Confirm Switch Password. The Ethernet Management Port Settings section has IP Address and Subnet Mask (255.255.255.0). The Optional Settings section has Host Name (Switch), System Date (6 Sep 2006), System Time (09:56 PM), Time Zone (GMT + 05:30), and Daylight Saving Time (disabled). A vertical ID number 157686 is on the right side.

---

**Step 13** Enter this information in the **Network Settings** fields:

- In the **Management Interface (VLAN ID)** field, the default is 1. Enter a new VLAN ID only if you want to change the management interface through which you manage the switch. The VLAN ID range is 1 to 4094.
- In the **IP Address** field, enter the IP address of the switch. In the **Subnet Mask** field, click the drop-down arrow, and select a **Subnet Mask**.
- In the **Default Gateway** field, enter the IP address for the default gateway (router).
- Enter your password in the **Switch Password** field. The password can be from 1 to 25 alphanumeric characters, can start with a number, is case sensitive, allows embedded spaces, but does not allow spaces at the beginning or end. In the **Confirm Switch Password** field, enter your password again.



---

**Note** You must change the password from the default password, *cisco*.

---

**Step 14** (Optional) Enter this information in the **Ethernet Management Port Settings** fields: In the **IP Address** field, enter the IP address of the Ethernet management port. In the **Subnet Mask** field, click the drop-down arrow, and select a **Subnet Mask**.

---

---

**Step 15** (Optional) You can enter the **Optional Settings** information now or enter it later by using the device manager interface:

- In the **Host Name** field, enter a name for the switch. The host name is limited to 31 characters; embedded spaces are not allowed.
- Enter the date, time, and time zone information in the **System Date**, **System Time**, and **Time Zone** fields. Click **Enable** to enable daylight saving time.

---

**Step 16** (Optional) You can select the **Advanced Settings** tab on the Express Setup window and enter the advanced settings now or enter them later by using the device manager interface.

Basic Settings **Advanced Settings**

Telnet Access:  Enable  Disable

Telnet Password:  Confirm Telnet Password:

SNMP:  Enable  Disable

SNMP Read Community:  SNMP Write Community:

System Contact:  System Location:

**IPv6 Settings**

Enable IPv6

157718

- 
- Step 17** (Optional) Enter this information in the **Advanced Setting** fields:
- In the **Telnet Access** field, click **Enable** if you are going to use Telnet to manage the switch by using the command-line interface (CLI). If you enable Telnet access, you must enter a Telnet password.
  - In the **Telnet Password** field, enter a password. The Telnet password can be from 1 to 25 alphanumeric characters, is case sensitive, allows embedded spaces, but does not allow spaces at the beginning or end. In the **Confirm Telnet Password** field, re-enter the Telnet password.
  - In the **SNMP** field, click **Enable** to enable Simple Network Management Protocol (SNMP). Enable SNMP only if you plan to manage switches by using CiscoWorks 2000 or another SNMP-based network-management system.
  - If you enable SNMP, you must enter a community string in the **SNMP Read Community** field, the **SNMP Write Community** field, or both. SNMP community strings authenticate access to MIB objects. Embedded spaces are not allowed in SNMP community strings. When you set the SNMP read community, you can access SNMP information, but you cannot change it. When you set the SNMP write community, you can both access and change SNMP information.
  - In the **System Contact** and **System Location** fields, enter a contact name and the wiring closet, floor, or building where the switch is located.

- 
- Step 18** (Optional) You can enable IPv6 on the switch in the Advanced Settings window. In the **Enable IPv6** field, click **Enable**.



---

**Note** Enabling IPv6 restarts the switch when you complete Express Setup.

---

- Step 19** To complete Express Setup, click **Submit** in the Network Settings or the Advanced Settings window to save your settings. Click **Cancel** to clear your settings.

When you click **Submit**, the switch is configured and exits Express Setup mode. The PC displays a warning message and then tries to connect with the new switch IP address. If you configured the switch with an IP address that is in a different subnet from the PC, connectivity between the PC and the switch is lost. If you enabled IPv6, the switch restarts.

- 
- Step 20** Disconnect the switch from the PC, and install the switch in your production network. See the “Managing the Switch” section on page 9 for information about configuring and managing the switch.

If you need to rerun Express Setup, see the “Resetting the Switch” section on page 21.

---



## Refreshing the PC IP Address

After you complete Express Setup, you should refresh the PC IP address:

- For a dynamically assigned IP address, disconnect the PC from the switch, and reconnect the PC to the network. The network DHCP server assigns a new IP address to the PC.
- For a statically assigned IP address, change it to the previously configured IP address.

## 4 Managing the Switch

After you complete Express Setup and install the switch in your network, use the device manager or other management options described in this section for further configuration.

### Using the Device Manager

The simplest way to manage the switch is by using the device manager that is in the switch memory. This is a web interface that offers quick configuration and monitoring. You can access the device manager from anywhere in your network through a web browser.

Follow these steps:

1. Launch a web browser on your PC or workstation.
2. Enter the switch IP address in the web browser, and press **Enter**. The device manager page appears.
3. Use the device manager to perform basic switch configuration and monitoring. Refer to the device manager online help for more information.
4. For more advanced configuration, download and run the Cisco Network Assistant, which is described in the next section.

### Downloading Cisco Network Assistant

Cisco Network Assistant is a software program that you download from Cisco.com and run on your PC. It offers advanced options for configuring and monitoring multiple devices, including switches, switch clusters, routers, and access points. Network Assistant is free—there is no charge to download, install, or use it.

Follow these steps:

1. Go to this Web address: <http://www.cisco.com/go/NetworkAssistant>.  
You must be a registered Cisco.com user, but you need no other access privileges.
2. Find the Network Assistant installer.

3. Download the Network Assistant installer, and run it. (You can run it directly from the Web if your browser offers this choice.)
4. When you run the installer, follow the displayed instructions. In the final panel, click **Finish** to complete the Network Assistant installation.

Refer to the Network Assistant online help and the getting started guide for more information.

## Command-Line Interface

You can enter Cisco IOS commands and parameters through the CLI. Access the CLI by connecting your PC directly to the switch console port or to the Ethernet management port.

### Using the switch console port:

Follow these steps:

1. Connect the supplied RJ-45-to-DB-9 adapter cable to the standard 9-pin serial port on the PC. Connect the other end of the cable to the console port on the switch.
2. Start a terminal-emulation program on the PC.
3. Configure the PC terminal emulation software for 9600 baud, 8 data bits, no parity, 1 stop bit, and no flow control.
4. Use the CLI to enter commands to configure the switch. See the software configuration guide and the command reference for more information.

### Using the switch Ethernet management port:

Follow these steps:

1. Connect a Category 5 Ethernet cable to the PC Ethernet port. Connect the other end of the cable to the Ethernet management port on the switch rear panel.
2. Start a Telnet session on the PC.
3. Enter the switch IP address that you assigned by using Express Setup.
4. Use the CLI to enter commands to configure the switch. See the software configuration guide and the command reference for more information.

## Other Management Options

You can use SNMP management applications such as CiscoWorks Small Network Management Solution (SNMS) and HP OpenView to configure and manage the switch. You also can manage it from an SNMP-compatible workstation that is running platforms such as HP OpenView or SunNet Manager.

The Cisco IE2100 Series Configuration Registrar is a network management device that works with embedded Cisco Networking Services agents in the switch software. You can use IE2100 to automate initial configurations and configuration updates on the switch.

See the “Accessing Help Online” section on page 21 for a list of supporting documentation.

## 5 Rack-Mounting

This section covers basic 19-inch rack-mounting and switch port connections. As an example, all the illustrations show the Catalyst 3560E-48 PoE switch. You can install and connect other Catalyst 3560-E switches as shown in these illustrations. For additional installation and cabling information, see the hardware installation guide on Cisco.com.

## Equipment That You Supply

You need a Phillips screwdriver to rack-mount the switch.

## Before You Begin

Before installing the switch, verify that these guidelines are met:

- Clearance to front and rear panels is such that
  - Front-panel indicators can be easily read.
  - Access to ports is sufficient for unrestricted cabling.
- For switches that support the RPS 2300, confirm that you have access to the switch rear panel to connect the RPS 2300. If you do not have access to the rear panel, you should cable the switches before you rack-mount them.
- For switches with the optional 1150-W power supply module (model C3K-PWR-1150WAC), first rack-mount the switch before installing the power supply module.
- AC power cord can reach from the AC power outlet to the connector on the switch rear panel.

- Cabling is away from sources of electrical noise, such as radios, power lines, and fluorescent lighting fixtures. Make sure the cabling is safely away from other devices that might damage the cables.
- Airflow around the switch and through the vents is unrestricted.
- Temperature around the unit does not exceed 113°F (45°C). If the switch is installed in a closed or multitrack assembly, the temperature around it might be greater than normal room temperature.
- For copper connections on Ethernet ports, cable lengths from the switch to connected devices can be up to 328 feet (100 meters).
- For cable lengths for X2 transceiver modules and SFP-module connections, see the hardware installation guide on Cisco.com and the documentation that shipped with the module.

## Installation Warning Statements

This section includes the basic installation warning statements. Translations of these warning statements appear in the *Regulatory Compliance and Safety Information for the Catalyst 3750-E and Catalyst 3560-E Switch* guide.



---

### Warning

---

**To prevent the switch from overheating, do not operate it in an area that exceeds the maximum recommended ambient temperature of 113°F (45°C). To prevent airflow restriction, allow at least 3 inches (7.6 cm) of clearance around the ventilation openings.**

Statement 17B

---



---

### Warning

---

**Do not reach into a vacant slot or chassis while you install or remove a module or a fan. Exposed circuitry could constitute an energy hazard.** Statement 206

---



---

**Warning**

**To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:**

- **This unit should be mounted at the bottom of the rack if it is the only unit in the rack.**
  - **When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.**
  - **If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.** Statement 1006
- 



---

**Warning**

**This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security.** Statement 1017

---



---

**Warning**

**Only trained and qualified personnel should be allowed to install, replace, or service this equipment.** Statement 1030

---



---

**Caution**

To comply with the Telcordia GR-1089 Network Equipment Building Systems (NEBS) standard for electromagnetic compatibility and safety, connect the Ethernet cables only to intrabuilding or nonexposed wiring or cabling.

---



---


**Note**

The grounding architecture of this product is DC-isolated (DC-I)

---


## Before Attaching the Brackets

To install the switch in a rack, you must first remove the screws from the switch chassis so that the mounting brackets can be attached. For attachment at the front-mounting position remove two Phillips truss-head screws from the switch side panels. For some switch models, remove only one screw from the side panels. For attachment at the mid-mounting position, remove one screw. For attachment at the rear-mounting position, remove one or two screws depending on the switch model.

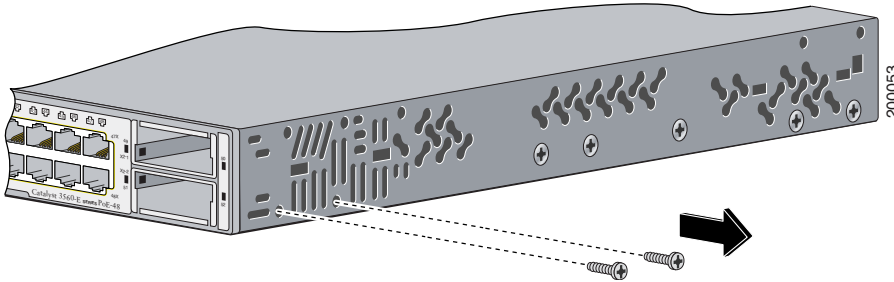

## Attaching the Brackets


Use four number-8 Phillips flat-head screws to attach the long side of each bracket to the switch in one of three mounting positions.

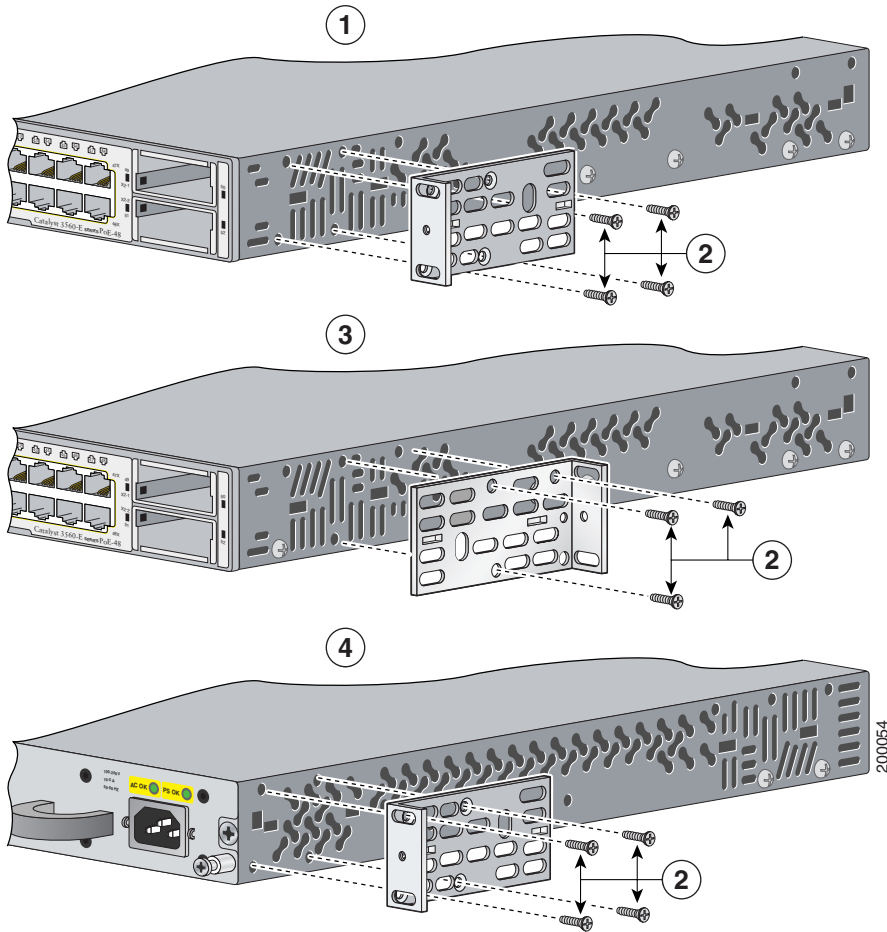

<b>1</b>	Front-mounting position	<b>3</b>	Mid-mounting position
<b>2</b>	Number-8 Phillips flat-head screws	<b>4</b>	Rear-mounting position

## Rack-Mount the Switch

Use the four number-12 Phillips machine screws to attach the brackets to the rack. Use the black Phillips machine screw to attach the cable guide to the left or right bracket.

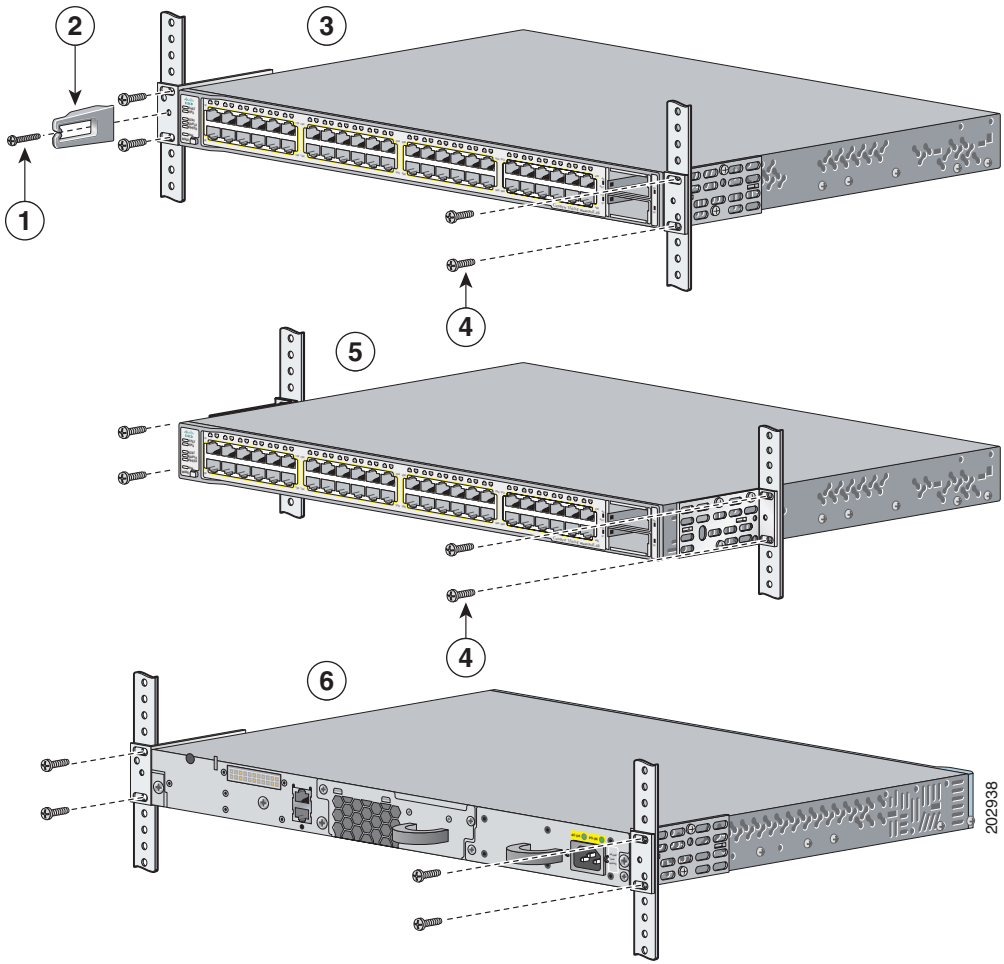

<b>1</b>	Black Phillips machine screw	<b>4</b>	Number-12 Phillips machine screws
<b>2</b>	Cable guide	<b>5</b>	Mid-mounting position
<b>3</b>	Front-mounting position	<b>6</b>	Rear-mounting position



## 6 Connecting to the Switch Ports

This section describes how to connect to the fixed switch ports, to the 10-Gigabit Ethernet module slots, and to the SFP module slots. Some switch models might not include 10/100/1000 Ethernet ports, 10/100/1000 PoE ports, or SFP slots.

### Connect to 10/100/1000 Ports

The 10/100/1000 Ethernet ports use standard RJ-45 connectors with Ethernet pinouts. The maximum cable length is 328 feet (100 meters). The 100BASE-TX and 1000BASE-T traffic requires Category 5, Category 5e, or Category 6 UTP cable. The 10BASE-T traffic can use Category 3 or Category 4 cable.

The autonegotiation feature is enabled by default on the switch. At this setting, the switch ports configure themselves to operate at the speed of attached devices. If the attached device does not support autonegotiation, you can explicitly set the switch port speed and the duplex parameters. To maximize performance, either let the ports autonegotiate both speed and duplex, or set the port speed and duplex parameters on both ends of the connection.

For simplified cabling, the automatic medium-dependent interface crossover (auto-MDIX) feature is enabled by default on the switch. With auto-MDIX enabled, the switch detects the required cable type for copper Ethernet connections and configures the interface accordingly. Therefore, you can use either a crossover or a straight-through cable for connections to a switch 10/100/1000 Ethernet port, regardless of the type of device on the other end of the connection.

See the switch software configuration guide or the switch command reference on Cisco.com for more information about enabling or disabling autonegotiation and auto-MDIX.

### Connect to 10/100/1000 PoE Ports

The 10/100/1000 PoE ports have the same default settings and cabling requirements that are described in the previous section.

The PoE ports provide PoE support for devices compliant with IEEE 802.3af and also provide Cisco pre-standard PoE support for Cisco IP Phones and Cisco Aironet Access Points.

Each port can deliver up to 15.4 W of PoE. With the 1150-W power supply module, the Catalyst 3560E-48PS switch can deliver 15.4 W on all 48 ports. With the 750-W power supply module, the switches can deliver 15.4 W of PoE on any 24 of the 48 ports, or any combination of the ports can deliver an average of 7.7 W of PoE at the same time, up to a maximum switch power output of 370 W. On a per-port basis, you can control whether or not a PoE port automatically provides power when an IP phone or an access point is connected.


See the hardware installation guide on Cisco.com for more information about the switch power supply options.

## Install and Connect to Devices in the 10-Gigabit Ethernet Slots

The switch 10-Gigabit Ethernet module slots are used for connections to other switches and routers. The module slots operate in full-duplex mode and use the hot-swappable Cisco X2 transceiver modules and the Cisco TwinGig Converter Module. The X2 transceiver modules have SC connectors to connect to multimode fiber (MMF) and single-mode fiber (SMF) cables. The Cisco converter modules have two SFP-module slots that convert the 10-Gigabit interface into a dual SFP interface.

For switches with horizontal 10-Gigabit Ethernet module slots, position the module face up to install in the upper module slot (slot 1). Position the module face down to install in the lower module slot (slot 2).

For switches with vertical 10-Gigabit Ethernet module slots, position the module top facing right to install in a vertical module slot.

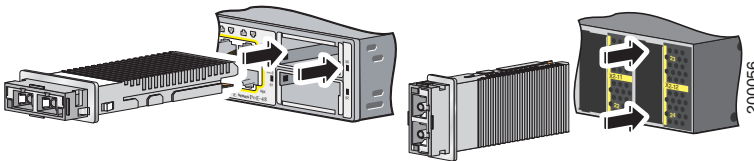


When you install or remove the Cisco TwinGig converter module, the mode on the switch changes from 10-Gigabit Ethernet to Gigabit Ethernet or the reverse. During this mode change, data traffic on the other switch uplink ports (X2 transceiver or SFP module ports) might temporarily stop. When you install or remove an X2 transceiver or SFP modules, traffic delay does not occur.

Use only Cisco X2 transceiver modules, Cisco converter modules, and Cisco SFP modules with the switch. Each Cisco module has an internal serial EEPROM that is encoded with security information. This encoding provides a way for Cisco to identify and validate that the module meets the requirements for the switch.

## Install SFP Modules and Connect to the Module Ports

The switch Gigabit Ethernet SFP modules are used for connections to other devices. These transceiver modules are field-replaceable, providing the uplink interfaces when inserted in an SFP module slot. You can use any combination of SFP modules. See the switch release notes for the list of SFP modules that the switch supports.

To install an SFP module, position the module in front of the module slot. Insert the SFP module into the slot until you feel the connector on the module snap into place.

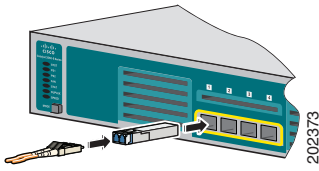

After installing the SFP module, use fiber-optic cables with LC or MT-RJ connectors to connect to a fiber-optic SFP module. Use a Category 5 or higher cable with RJ-45 connectors to connect to a copper SFP module. For detailed instructions on installing, removing, and cabling the SFP module, see your SFP module documentation.

Use only Cisco SFP modules with the switch. Each SFP module has an internal serial EEPROM that is encoded with security information. This encoding provides a way for Cisco to identify and validate that the SFP module meets the requirements for the switch.

## Verify Port Connectivity

After you connect a device to the switch port, the port LED turns amber while the switch establishes a link. This process takes about 30 seconds. Then the LED turns green when the switch and the attached device have an established link. If the LED is off, the device might not be turned on, there might be a cable problem, or there might be a problem with the adapter installed in the device. See the “In Case of Difficulty” section on page 20 for information about online assistance.

## 7 In Case of Difficulty

If you experience difficulty, help is available in this section and also on Cisco.com. This section includes Express Setup troubleshooting, how to reset the switch, how to access help online, and where to find more information.

### Troubleshooting Express Setup

If Express Setup does not run, or if the Express Setup page does not appear in your browser:

- Did you verify that POST successfully ran before starting Express Setup?  
If not, make sure that only the SYST and STAT LEDs are green before pressing the Mode button to enter the Express Setup mode.  
POST errors are usually fatal. Contact your Cisco technical support representative if your switch fails POST.
- Did you press the Mode button while the switch was still running POST?  
If yes, wait until POST completes. Power cycle the switch. Wait until POST completes. Confirm that the SYST and STAT LEDs are green. Press the Mode button to enter Express Setup mode.
- Did you try to continue without confirming that the switch was in Express Setup mode?  
Verify that all LEDs above the Mode button are green. (The RPS LED is off.) If necessary, press the Mode button to enter Express Setup mode.
- Does your PC have a static IP address?  
If yes, change your PC settings to temporarily use DHCP before connecting to the switch.
- Did you connect the Ethernet cable to the console port instead of to a 10/100/1000 Ethernet port or the 10/100 Ethernet management port on the switch?  
If yes, disconnect the cable from the console port. Then connect the cable to an Ethernet port on the switch and on the PC. Wait 30 seconds before you enter **10.0.0.1** in the browser.
- Did you wait 30 seconds after you connected the switch and the PC before you entered the IP address in your browser?  
If not, wait 30 seconds, re-enter **10.0.0.1** in the browser, and press **Enter**.
- Did you enter the wrong address in the browser, or is there an error message?  
If yes, re-enter **10.0.0.1** in the browser, and press **Enter**.

## Resetting the Switch

This section describes how to reset the switch by rerunning Express Setup. These are reasons why you might want to reset the switch:

- You installed the switch in your network and cannot connect to it because you assigned the incorrect IP address.
- You want to clear all configuration from the switch and assign a new IP address.
- You are trying to enter Express Setup mode, and the switch LEDs start blinking when you press the Mode button (which means that the switch is already configured with IP information).



---

**Caution**

Resetting the switch deletes the configuration and reboots the switch.

---

To reset the switch:

- Press and hold the Mode button. The switch LEDs begin blinking after about 3 seconds. Continue holding down the Mode button. The LEDs stop blinking after 7 more seconds, and then the switch reboots.

The switch now behaves like an unconfigured switch. You can enter the switch IP information by using Express Setup as described in the “Running Express Setup” section on page 4.

## Accessing Help Online

First look for a solution to your problem in the troubleshooting section of the hardware installation guide or the software configuration guide on Cisco.com. You can also access the Cisco Technical Support and Documentation website for a list of known hardware problems and extensive troubleshooting documentation.

## For More Information

For more information about the switch, see these documents on Cisco.com:

- *Catalyst 3750-E and Catalyst 3560-E Switch Hardware Installation Guide*
- *Regulatory Compliance and Safety Information for the Catalyst 3750-E and Catalyst 3560-E Switch*
- *Release Notes for the Catalyst 3750-E and Catalyst 3560-E Switch*
- *Catalyst 3750-E and Catalyst 3560-E Switch Software Configuration Guide*
- *Cisco Software Activation and Compatibility Document*
- *Catalyst 3750-E and Catalyst 3560-E Switch Command Reference*
- *Catalyst 3750-E and Catalyst 3560-E Switch System Message Guide*
- *Documentation Updates for the Catalyst 3560E-12D Switch*
- *Installation Notes for the Catalyst 3750-E, Catalyst 3560-E, and RPS 2300 Power Supply Modules*
- *Installation Notes for the Catalyst 3750-E and Catalyst 3560-E Switch Fan Modules*
- *Installation Notes for the Cisco TwinGig Converter Module*
- *Cisco Redundant Power System 2300 Hardware Installation Guide*
- *Cisco Redundant Power System 2300 Compatibility Matrix*

## 8 Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.

## 9 Cisco Warranty Terms

Catalyst 3560-E switches are covered by the Cisco Limited Lifetime Hardware Warranty. For more information, see this document on Cisco.com:

[http://www.cisco.com/en/US/docs/general/warranty/English/LH2DEN\\_\\_.html](http://www.cisco.com/en/US/docs/general/warranty/English/LH2DEN__.html)



### Note

---

If you purchased your Catalyst 3560-E switch before May 1, 2009, your switch is covered by the Cisco 90-Day Limited Hardware Warranty. For more information, see this document on Cisco.com:

[http://www.cisco.com/en/US/docs/general/warranty/English//901DEN\\_\\_.html](http://www.cisco.com/en/US/docs/general/warranty/English//901DEN__.html)

---

CCDE, CCENT, CCSI, Cisco Eos, Cisco Explorer, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco TrustSec, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1002R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

Catalyst 3560-E Switch Getting Started Guide

© 2007–2010 Cisco Systems, Inc. All rights reserved.




**Americas Headquarters**  
Cisco Systems, Inc.  
San Jose, CA

**Asia Pacific Headquarters**  
Cisco Systems (USA) Pte. Ltd.  
Singapore

**Europe Headquarters**  
Cisco Systems International BV  
Amsterdam, The Netherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the  
Cisco Website at [www.cisco.com/go/offices](http://www.cisco.com/go/offices).

 Printed in the USA on recycled paper containing 10% postconsumer waste.