



Cisco LRE CPE Hardware Installation Guide

May 2003

Corporate Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 526-4100

Customer Order Number: DOC-7811469=
Text Part Number: 78-11469-04



THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The following information is for FCC compliance of Class A devices: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

The following information is for FCC compliance of Class B devices: The equipment described in this manual generates and may radiate radio-frequency energy. If it is not installed in accordance with Cisco's installation instructions, it may cause interference with radio and television reception. This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in part 15 of the FCC rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

Modifying the equipment without Cisco's written authorization may result in the equipment no longer complying with FCC requirements for Class A or Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

You can determine whether your equipment is causing interference by turning it off. If the interference stops, it was probably caused by the Cisco equipment or one of its peripheral devices. If the equipment causes interference to radio or television reception, try to correct the interference by using one or more of the following measures:

- Turn the television or radio antenna until the interference stops.
- Move the equipment to one side or the other of the television or radio.
- Move the equipment farther away from the television or radio.
- Plug the equipment into an outlet that is on a different circuit from the television or radio. (That is, make certain the equipment and the television or radio are on circuits controlled by different circuit breakers or fuses.)

Modifications to this product not authorized by Cisco Systems, Inc. could void the FCC approval and negate your authority to operate the product.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

CCIP, CCSP, the Cisco Arrow logo, the Cisco *Powered* Network mark, the Cisco Systems Verified logo, Cisco Unity, Follow Me Browsing, FormShare, iQ Net Readiness Scorecard, Networking Academy, and ScriptShare are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn, The Fastest Way to Increase Your Internet Quotient, and iQuick Study are service marks of Cisco Systems, Inc.; and Aironet, ASIST, BPX, Catalyst, CCDA, CCDP, CCIE, CCNA, CCNP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, the Cisco IOS logo, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Empowering the Internet Generation, Enterprise/Solver, EtherChannel, EtherSwitch, Fast Step, GigaStack, Internet Quotient, IOS, IP/TV, iQ Expertise, the iQ logo, LightStream, MGX, MICA, the Networkers logo, Network Registrar, *Packet*, PIX, Post-Routing, Pre-Routing, RateMUX, Registrar, SlideCast, SMARTnet, StrataView Plus, Stratm, SwitchProbe, TeleRouter, TransPath, and VCO are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries.

All other trademarks mentioned in this document or Web site are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0303R)

Cisco LRE CPE Hardware Installation Guide

Copyright © 2001–2003, Cisco Systems, Inc.

All rights reserved.



Cisco Limited Lifetime Hardware Warranty Terms ix

Preface xiii

Audience xiii

Purpose xiii

Conventions xiv

Related Publications xxi

Obtaining Documentation xxiii

 Cisco.com xxiii

 Documentation CD-ROM xxiv

 Ordering Documentation xxiv

 Documentation Feedback xxiv

Obtaining Technical Assistance xxv

 Cisco.com xxv

 Technical Assistance Center xxvi

 Cisco TAC Website xxvi

 Cisco TAC Escalation Center xxvii

Obtaining Additional Publications and Information xxvii

CHAPTER 1

Overview 1-1

Features 1-1

Front-Panel Description 1-5

Rear-Panel Description 1-8

Installation 2-1

Preparing for Installation 2-2

Warnings 2-2

EMC Regulatory Statements 2-4

U.S.A. 2-4

FCC Requirements 2-4

Labeling Requirements 2-4

Canada ICES 003, Issue 3 2-4

Japan VCCI 2-5

Korea 2-5

Australian Telecommunications Compliance 2-5

Warnings for Norway and Sweden 2-6

Cisco 575 Ethernet Connection Warning for Norway and Sweden 2-6

Cisco 576 LRE 997 Ethernet Connection Warning for Norway and Sweden 2-7

Germany 2-8

Sicherheitshinweise 2-8

Safety Instructions 2-9

Verifying Package Contents 2-10

Installing the CPE 2-11

Installing the CPE on a Desk (without Mounting Screws) 2-11

Installing the CPE on a Desk (with Mounting Screws) 2-12

Installing the CPE Under a Desk 2-15

Installing the CPE on a Wall 2-18

Connecting to a 10/100 Port 2-21

Connecting to a Wall-Mounted Telephone Jack 2-23

Connecting to a Telephone 2-24

Connecting the Power Cord 2-27

Attaching the Cable Lock 2-29

Powering On the CPE 2-33

Where to Go Next 2-33

CHAPTER 3

Troubleshooting 3-1

APPENDIX A

Technical Specifications A-1

APPENDIX B

Connector and Cable Specifications B-1

Connector Specifications B-1

10/100 Ports B-1

WALL Port B-2

PHONE Port B-3

Cable Specifications B-5

Ethernet Straight-Through Cable Pinouts B-5

Telephone Straight-Through and Rollover Cable Pinouts B-6

Identifying a Telephone Rollover Cable B-7

APPENDIX C

Translated Safety Warnings C-1

Qualified Personnel Warning C-1

Installation Warning C-2

Jewelry Removal Warning C-4

Main Disconnecting Device C-6

Overheating Prevention Warning C-7

TN Power Warning C-9

Circuit Breaker Warning C-10

Voltage Warning C-12

Lightning Activity Warning C-14

Product Disposal Warning C-15

No On/Off Switch Warning C-17



Cisco Limited Lifetime Hardware Warranty Terms

There are special terms applicable to your hardware warranty and various services that you can use during the warranty period. Follow these steps to access and download the *Cisco Information Packet* and your warranty document from Cisco.com.

1. Launch your browser, and go to this URL:

http://www.cisco.com/univercd/cc/td/doc/es_inpk/cetrans.htm

The Warranties and License Agreements page appears.

2. To read the *Cisco Information Packet*, follow these steps:

- a. Click the **Information Packet Number** field, and make sure that the part number 78-5235-02F0 is highlighted.
- b. Select the language in which you would like to read the document.
- c. Click **Go**.

The Cisco Limited Warranty and Software License page from the Information Packet appears.

- d. Read the document online, or click the **PDF** icon to download and print the document in Adobe Portable Document Format (PDF).



Note

You must have Adobe Acrobat Reader to view and print PDF files. You can download the reader from Adobe's website: <http://www.adobe.com>

3. To read translated and localized warranty information about your product, follow these steps:
 - a. Enter this part number in the Warranty Document Number field:
78-6310-02C0
 - b. Select the language in which you would like to view the document.
 - c. Click **Go**.
The Cisco warranty page appears.
 - d. Read the document online, or click the **PDF** icon to download and print the document in Adobe Portable Document Format (PDF).

You can also contact the Cisco service and support website for assistance:

http://www.cisco.com/public/Support_root.shtml.

Duration of Hardware Warranty

A Cisco product hardware warranty is supported for as long as the original end user continues to own or use the product, provided that the fan and power supply warranty is limited to five (5) years. In the event of a discontinuance of product manufacture, the Cisco warranty support is limited to five (5) years from the announcement of the discontinuance.

Replacement, Repair, or Refund Policy for Hardware

Cisco or its service center will use commercially reasonable efforts to ship a replacement part within ten (10) working days after receipt of the Return Materials Authorization (RMA) request. Actual delivery times can vary, depending on the customer location.

Cisco reserves the right to refund the purchase price as its exclusive warranty remedy.

To Receive a Return Materials Authorization (RMA) Number

Contact the company from whom you purchased the product. If you purchased the product directly from Cisco, contact your Cisco Sales and Service Representative.

Complete the information below, and keep it for reference.

Company product purchased from	
Company telephone number	
Product model number	
Product serial number	
Maintenance contract number	



Preface

Audience

This guide is for the networking or computer technician responsible for installing a Cisco LRE CPE, a Long-Reach Ethernet (LRE) customer premises equipment (CPE) device. We assume that you are familiar with the concepts and terminology of Ethernet and local area networking.

Purpose

The *Cisco LRE CPE Hardware Installation Guide* describes the hardware features of the Cisco LRE CPE devices. It describes the physical and performance characteristics of the CPEs, explains how to install a CPE, and provides troubleshooting information and specifications.

Conventions

This guide uses these conventions to convey instructions and information.

Notes, tips, cautions, and warnings use these conventions and symbols:



Note

Means *reader take note*. Notes contain helpful suggestions or references to materials not contained in this manual.



Tip

Means *the following information will help you solve a problem*. The tips information might not be troubleshooting or even an action, but could be useful information.



Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.



Warning

IMPORTANT SAFETY INSTRUCTIONS

This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. To see translations of the warnings that appear in this publication, refer to the translated safety warnings that accompanied this device.

Note: SAVE THESE INSTRUCTIONS

Note: This documentation is to be used in conjunction with the specific product installation guide that shipped with the product. Please refer to the Installation Guide, Configuration Guide, or other enclosed additional documentation for further details.

Waarschuwing BELANGRIJKE VEILIGHEIDSINSTRUCTIES

Dit waarschuwingssymbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij elektrische schakelingen betrokken risico's en dient u op de hoogte te zijn van de standaard praktijken om ongelukken te voorkomen. Voor een vertaling van de waarschuwingen die in deze publicatie verschijnen, dient u de vertaalde veiligheidswaarschuwingen te raadplegen die bij dit apparaat worden geleverd.

Opmerking BEWAAR DEZE INSTRUCTIES.

Opmerking Deze documentatie dient gebruikt te worden in combinatie met de installatiehandleiding voor het specifieke product die bij het product wordt geleverd. Raadpleeg de installatiehandleiding, configuratiehandleiding of andere verdere ingesloten documentatie voor meer informatie.

Varoitus TÄRKEITÄ TURVALLISUUTEEN LIITTYVIÄ OHJEITA

Tämä varoitusmerkki merkitsee vaaraa. Olet tilanteessa, joka voi johtaa ruumiinvammaan. Ennen kuin työskentelet minkään laitteiston parissa, ota selvää sähkökytkentöihin liittyvistä vaaroista ja tavanomaisista onnettomuuksien ehkäisykeinoista. Tässä asiakirjassa esitettyjen varoitusten käännökset löydät laitteen mukana toimitetuista ohjeista.

Huomautus SÄILYTÄ NÄMÄ OHJEET

Huomautus Tämä asiakirja on tarkoitettu käytettäväksi yhdessä tuotteen mukana tulleen asennusoppaan kanssa. Katso lisätietoja asennusoppaasta, kokoonpano-oppaasta ja muista mukana toimitetuista asiakirjoista.

Attention IMPORTANTES INFORMATIONS DE SÉCURITÉ

Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant causer des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers posés par les circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents. Pour prendre connaissance des traductions d'avertissements figurant dans cette publication, consultez les consignes de sécurité traduites qui accompagnent cet appareil.

Remarque CONSERVEZ CES INFORMATIONS

Remarque Cette documentation doit être utilisée avec le guide spécifique d'installation du produit qui accompagne ce dernier. Veuillez vous reporter au Guide d'installation, au Guide de configuration, ou à toute autre documentation jointe pour de plus amples renseignements.

Warnung WICHTIGE SICHERHEITSANWEISUNGEN

Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu einer Körperverletzung führen könnte. Bevor Sie mit der Arbeit an irgendeinem Gerät beginnen, seien Sie sich der mit elektrischen Stromkreisen verbundenen Gefahren und der Standardpraktiken zur Vermeidung von Unfällen bewusst. Übersetzungen der in dieser Veröffentlichung enthaltenen Warnhinweise sind im Lieferumfang des Geräts enthalten.

Hinweis BEWAHREN SIE DIESE SICHERHEITSANWEISUNGEN AUF

Hinweis Dieses Handbuch ist zum Gebrauch in Verbindung mit dem Installationshandbuch für Ihr Gerät bestimmt, das dem Gerät beiliegt. Entnehmen Sie bitte alle weiteren Informationen dem Handbuch (Installations- oder Konfigurationshandbuch o. Ä.) für Ihr spezifisches Gerät.

Figyelem! FONTOS BIZTONSÁGI ELŐÍRÁSOK

Ez a figyelmeztető jel veszélyre utal. Sérülésveszélyt rejtő helyzetben van. Mielőtt bármely berendezésen munkát végezte, legyen figyelemmel az elektromos áramkörök okozta kockázatokra, és ismerkedjen meg a szokásos balesetvédelmi eljárásokkal. A kiadványban szereplő figyelmeztetések fordítása a készülékhez mellékelt biztonsági figyelmeztetések között található.

Megjegyzés ŐRIZZE MEG EZEKET AZ UTASÍTÁSOKAT!

Megjegyzés Ezt a dokumentációt a készülékhez mellékelt üzembe helyezési útmutatóval együtt kell használni. További tudnivalók a mellékelt Üzembe helyezési útmutatóban (Installation Guide), Konfigurációs útmutatóban (Configuration Guide) vagy más dokumentumban található.

Avvertenza IMPORTANTI ISTRUZIONI SULLA SICUREZZA

Questo simbolo di avvertenza indica un pericolo. La situazione potrebbe causare infortuni alle persone. Prima di intervenire su qualsiasi apparecchiatura, occorre essere al corrente dei pericoli relativi ai circuiti elettrici e conoscere le procedure standard per la prevenzione di incidenti. Per le traduzioni delle avvertenze riportate in questo documento, vedere le avvertenze di sicurezza che accompagnano questo dispositivo.

Nota CONSERVARE QUESTE ISTRUZIONI

Nota La presente documentazione va usata congiuntamente alla guida di installazione specifica spedita con il prodotto. Per maggiori informazioni, consultare la Guida all'installazione, la Guida alla configurazione o altra documentazione acclusa.

Advarsel VIKTIGE SIKKERHETSINSTRUKSJONER

Dette varselssymbolet betyr fare. Du befinner deg i en situasjon som kan forårsake personskade. Før du utfører arbeid med utstyret, bør du være oppmerksom på farene som er forbundet med elektriske kretssystemer, og du bør være kjent med vanlig praksis for å unngå ulykker. For å se oversettelser av advarslene i denne publikasjonen, se de oversatte sikkerhetsvarslene som følger med denne enheten.

Merk TA VARE PÅ DISSE INSTRUKSJONENE

Merk Denne dokumentasjonen skal brukes i forbindelse med den spesifikke installasjonsveiledningen som fulgte med produktet. Vennligst se installasjonsveiledningen, konfigureringsveiledningen eller annen vedlagt tilleggsdokumentasjon for detaljer.

Aviso INSTRUÇÕES IMPORTANTES DE SEGURANÇA

Este símbolo de aviso significa perigo. O utilizador encontra-se numa situação que poderá ser causadora de lesões corporais. Antes de iniciar a utilização de qualquer equipamento, tenha em atenção os perigos envolvidos no manuseamento de circuitos eléctricos e familiarize-se com as práticas habituais de prevenção de acidentes. Para ver traduções dos avisos incluídos nesta publicação, consulte os avisos de segurança traduzidos que acompanham este dispositivo.

Nota GUARDE ESTAS INSTRUÇÕES

Nota Esta documentação destina-se a ser utilizada em conjunto com o manual de instalação incluído com o produto específico. Consulte o manual de instalação, o manual de configuração ou outra documentação adicional inclusa, para obter mais informações.

¡Advertencia! INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Este símbolo de aviso indica peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considere los riesgos de la corriente eléctrica y familiarícese con los procedimientos estándar de prevención de accidentes. Vea las traducciones de las advertencias que acompañan a este dispositivo.

Nota GUARDE ESTAS INSTRUCCIONES

Nota Esta documentación está pensada para ser utilizada con la guía de instalación del producto que lo acompaña. Si necesita más detalles, consulte la Guía de instalación, la Guía de configuración o cualquier documentación adicional adjunta.

Varning! VIKTIGA SÄKERHETSANVISNINGAR

Denna varningssignal signalerar fara. Du befinner dig i en situation som kan leda till personskada. Innan du utför arbete på någon utrustning måste du vara medveten om farorna med elkretsar och känna till vanliga förfaranden för att förebygga olyckor. Se översättningarna av de varningsmeddelanden som finns i denna publikation, och se de översatta säkerhetsvarningarna som medföljer denna anordning.

OBS! SPARA DESSA ANVISNINGAR

OBS! Denna dokumentation ska användas i samband med den specifika produktinstallationshandbok som medföljde produkten. Se installationshandboken, konfigurationshandboken eller annan bifogad ytterligare dokumentation för närmare detaljer.

Предупреждение ВАЖНЫЕ СВЕДЕНИЯ ПО БЕЗОПАСНОСТИ

Этот символ предупреждает о наличии опасности. При неправильных действиях возможно получение травм. Перед началом работы с любым оборудованием необходимо ознакомиться с ситуациями, в которых возможно поражение электротоком, и со стандартными действиями для предотвращения несчастных случаев. Переведенный текст предупреждений содержится в соответствующем документе, поставляемом вместе с устройством.

Примечание СОХРАНЯЙТЕ ЭТУ ИНСТРУКЦИЮ

Примечание Эта инструкция должна использоваться вместе с руководством по установке конкретного изделия, входящим в комплект поставки. Дополнительные сведения см. в руководстве по установке, руководстве по настройке и другой документации, поставляемой с изделием.

警告 有关安全的重要说明

这个警告符号指有危险。您所处的环境可能使身体受伤。操作设备前必须意识到电流的危险性，务必熟悉操作标准，以防发生事故。如果需要了解本说明中出现的警告符号的译文，请参阅本装置所附之安全警告译文。

注意 保存这些说明

注意 本文件应与本产品附带的特定安装说明一并阅读。如欲了解详情，请参阅《安装说明》、《配置说明》或所附的其他文件。

警告 安全上の重要な注意事項

「危険」の意味です。人身事故を予防するための注意事項が記述されています。装置の取り扱い作業を行うときは、電気回路の危険性に注意し、一般的な事故防止対策に留意してください。このマニュアルに記載されている警告の各国語版は、装置に付属の「Translated Safety Warnings」を参照してください。

注 これらの注意事項を保管しておいてください。

注 この資料は、製品に付属のインストレーション ガイドと併用してください。詳細は、インストレーション ガイド、コンフィギュレーション ガイド、または添付されているその他のマニュアルを参照してください。

Related Publications

These documents provide complete information about the switch and are available from these Cisco.com sites:

<http://www.cisco.com/univercd/cc/td/doc/product/lan/c2900xl/index.htm>

<http://www.cisco.com/univercd/cc/td/doc/product/lan/cat2950/index.htm>

You can order printed copies of documents with a DOC-xxxxxx= number from the Cisco.com sites and from the telephone numbers listed in the “[Ordering Documentation](#)” section on page xxiv.

For information about the Catalyst 2900 XL and Catalyst 3500 XL switches, refer to these documents:

- *Release Notes for the Catalyst 2900 Series XL and Catalyst 3500 Series XL Switches* (not orderable but is available on Cisco.com)



Note

Switch requirements and procedures for initial configurations and software upgrades tend to change and therefore appear only in the release notes. Before installing, configuring, or upgrading the switch, refer to the release notes on Cisco.com for the latest information.

- *Catalyst 2900 Series XL Hardware Installation Guide* (order number DOC-786461=)
- *Catalyst 3500 Series XL Hardware Installation Guide* (order number DOC-786456=)
- *Catalyst 2900 Series XL Modules Installation Guide* (order number DOC-CAT2900-IG=)
- *Catalyst 2900 Series XL ATM Modules Installation and Configuration Guide* (order number DOC-785472=)
- *Catalyst 2900 Series XL and Catalyst 3500 Series XL Software Configuration Guide* (previously titled *Cisco IOS Desktop Switching Software Configuration Guide*) (order number DOC-786511=)
- *Catalyst 2900 Series XL and Catalyst 3500 Series XL Command Reference* (previously titled *Cisco IOS Desktop Switching Command Reference*) (order number DOC-7812155=)

For information about the Catalyst 2950 switches, refer to these documents:

- *Release Notes for the Catalyst 2950 and Catalyst 2955 Switches* (not orderable but is available on Cisco.com)
- *Release Notes for the Catalyst 2950 LRE Switches* (not orderable but is available on Cisco.com)

**Note**

Switch requirements and procedures for initial configurations and software upgrades tend to change and therefore appear only in the release notes. Before installing, configuring, or upgrading the switch, refer to the release notes on Cisco.com for the latest information.

For hardware information for the Catalyst 2950 switches, refer to the *Catalyst 2950 Desktop Switch Hardware Installation Guide* (order number DOC-7811157=)

For information about the Catalyst 2950 LRE switches, refer to these documents:

- *Catalyst 2950 Desktop Switch Software Configuration Guide* (order number DOC-7814982=)
- *Catalyst 2950 Desktop Switch Command Reference* (order number DOC-7814984=)
- *Catalyst 2950 Desktop Switch System Message Guide* (order number DOC-7814981=)
- *Release Notes for the Catalyst 2950 LRE Switch* (not orderable but available on Cisco.com)

For software information for the Catalyst 2950 switches, refer to these documents:

- *Catalyst 2950 and Catalyst 2955 Switch Software Configuration Guide* (order number DOC-7811380=)
- *Catalyst 2950 and Catalyst 2955 Switch Command Reference* (order number DOC-7811381=)
- *Catalyst 2950 and Catalyst 2955 Switch System Message Guide* (order number DOC-7814233=)

For other information about related products, refer to these documents:

- *Catalyst GigaStack Gigabit Interface Converter Hardware Installation Guide* (order number DOC-786460=)
- *Cisco RPS 300 Redundant Power System Hardware Installation Guide* (order number DOC-7810372=)
- *Cisco RPS 675 Redundant Power System Hardware Installation Guide* (order number DOC-7815201=)
- Cluster Management Suite (CMS) online help (available only from the switch CMS software)
- *CWDM Passive Optical System Installation Note* (not orderable but is available on Cisco.com)
- *1000BASE-T Gigabit Interface Converter Installation Note* (not orderable but is available on Cisco.com)

Obtaining Documentation

Cisco provides several ways to obtain documentation, technical assistance, and other technical resources. These sections explain how to obtain technical information from Cisco Systems.

Cisco.com

You can access the most current Cisco documentation on the World Wide Web at this URL:

<http://www.cisco.com/univercd/home/home.htm>

You can access the Cisco website at this URL:

<http://www.cisco.com>

You can access international Cisco websites from this URL:

http://www.cisco.com/public/countries_languages.shtml

Documentation CD-ROM

Cisco documentation and additional literature are available in a Cisco Documentation CD-ROM package, which may have shipped with your product. The Documentation CD-ROM is updated monthly and may be more current than printed documentation. The CD-ROM package is available as a single unit or through an annual subscription.

Registered Cisco.com users can order the Documentation CD-ROM (product number DOC-CONDOCCD=) through the online Subscription Store:

<http://www.cisco.com/go/subscription>

Ordering Documentation

You can find instructions for ordering documentation at this URL:

http://www.cisco.com/univercd/cc/td/doc/es_inpk/pdi.htm

You can order Cisco documentation in these ways:

- Registered Cisco.com users (Cisco direct customers) can order Cisco product documentation from the Networking Products MarketPlace:

<http://www.cisco.com/en/US/partner/ordering/index.shtml>

- Registered Cisco.com users can order the Documentation CD-ROM (Customer Order Number DOC-CONDOCCD=) through the online Subscription Store:

<http://www.cisco.com/go/subscription>

- Nonregistered Cisco.com users can order documentation through a local account representative by calling Cisco Systems Corporate Headquarters (California, U.S.A.) at 408 526-7208 or, elsewhere in North America, by calling 800 553-NETS (6387).

Documentation Feedback

You can submit comments electronically on Cisco.com. On the Cisco Documentation home page, click **Feedback** at the top of the page.

You can e-mail your comments to bug-doc@cisco.com.

You can submit your comments by mail by using the response card behind the front cover of your document or by writing to the following address:

Cisco Systems
Attn: Customer Document Ordering
170 West Tasman Drive
San Jose, CA 95134-9883

We appreciate your comments.

Obtaining Technical Assistance

Cisco provides Cisco.com, which includes the Cisco Technical Assistance Center (TAC) Website, as a starting point for all technical assistance. Customers and partners can obtain online documentation, troubleshooting tips, and sample configurations from the Cisco TAC website. Cisco.com registered users have complete access to the technical support resources on the Cisco TAC website, including TAC tools and utilities.

Cisco.com

Cisco.com offers a suite of interactive, networked services that let you access Cisco information, networking solutions, services, programs, and resources at any time, from anywhere in the world.

Cisco.com provides a broad range of features and services to help you with these tasks:

- Streamline business processes and improve productivity
- Resolve technical issues with online support
- Download and test software packages
- Order Cisco learning materials and merchandise
- Register for online skill assessment, training, and certification programs

To obtain customized information and service, you can self-register on Cisco.com at this URL:

<http://www.cisco.com>

Technical Assistance Center

The Cisco TAC is available to all customers who need technical assistance with a Cisco product, technology, or solution. Two levels of support are available: the Cisco TAC website and the Cisco TAC Escalation Center. The avenue of support that you choose depends on the priority of the problem and the conditions stated in service contracts, when applicable.

We categorize Cisco TAC inquiries according to urgency:

- Priority level 4 (P4)—You need information or assistance concerning Cisco product capabilities, product installation, or basic product configuration.
- Priority level 3 (P3)—Your network performance is degraded. Network functionality is noticeably impaired, but most business operations continue.
- Priority level 2 (P2)—Your production network is severely degraded, affecting significant aspects of business operations. No workaround is available.
- Priority level 1 (P1)—Your production network is down, and a critical impact to business operations will occur if service is not restored quickly. No workaround is available.

Cisco TAC Website

You can use the Cisco TAC website to resolve P3 and P4 issues yourself, saving both cost and time. The site provides around-the-clock access to online tools, knowledge bases, and software. To access the Cisco TAC website, go to this URL:

<http://www.cisco.com/tac>

All customers, partners, and resellers who have a valid Cisco service contract have complete access to the technical support resources on the Cisco TAC website. Some services on the Cisco TAC website require a Cisco.com login ID and password. If you have a valid service contract but do not have a login ID or password, go to this URL to register:

<http://tools.cisco.com/RPF/register/register.do>

If you are a Cisco.com registered user, and you cannot resolve your technical issues by using the Cisco TAC website, you can open a case online at this URL:

<http://www.cisco.com/en/US/support/index.html>

If you have Internet access, we recommend that you open P3 and P4 cases through the Cisco TAC website so that you can describe the situation in your own words and attach any necessary files.

Cisco TAC Escalation Center

The Cisco TAC Escalation Center addresses priority level 1 or priority level 2 issues. These classifications are assigned when severe network degradation significantly impacts business operations. When you contact the TAC Escalation Center with a P1 or P2 problem, a Cisco TAC engineer automatically opens a case.

To obtain a directory of toll-free Cisco TAC telephone numbers for your country, go to this URL:

<http://www.cisco.com/warp/public/687/Directory/DirTAC.shtml>

Before calling, please check with your network operations center to determine the level of Cisco support services to which your company is entitled: for example, SMARTnet, SMARTnet Onsite, or Network Supported Accounts (NSA). When you call the center, please have available your service agreement number and your product serial number.

Obtaining Additional Publications and Information

Information about Cisco products, technologies, and network solutions is available from various online and printed sources.

- The *Cisco Product Catalog* describes the networking products offered by Cisco Systems as well as ordering and customer support services. Access the *Cisco Product Catalog* at this URL:

http://www.cisco.com/en/US/products/products_catalog_links_launch.html

- Cisco Press publishes a wide range of networking publications. Cisco suggests these titles for new and experienced users: *Internetworking Terms and Acronyms Dictionary*, *Internetworking Technology Handbook*, *Internetworking Troubleshooting Guide*, and the *Internetworking Design Guide*. For current Cisco Press titles and other information, go to Cisco Press online at this URL:

<http://www.ciscopress.com>

- *Packet* magazine is the Cisco monthly periodical that provides industry professionals with the latest information about the field of networking. You can access *Packet* magazine at this URL:

http://www.cisco.com/en/US/about/ac123/ac114/about_cisco_packet_magazine.html

- *iQ Magazine* is the Cisco monthly periodical that provides business leaders and decision makers with the latest information about the networking industry. You can access *iQ Magazine* at this URL:

http://business.cisco.com/prod/tree.taf%3fasset_id=44699&public_view=true&kbns=1.html

- *Internet Protocol Journal* is a quarterly journal published by Cisco Systems for engineering professionals involved in the design, development, and operation of public and private internets and intranets. You can access the *Internet Protocol Journal* at this URL:

http://www.cisco.com/en/US/about/ac123/ac147/about_cisco_the_internet_protocol_journal.html

- Training—Cisco offers world-class networking training, with current offerings in network training listed at this URL:

http://www.cisco.com/en/US/learning/1e31/learning_recommended_training_list.html



Overview

This chapter describes the Cisco LRE CPE, a Long-Reach Ethernet (LRE) customer premises equipment (CPE) device and has these topics:

- Features
- Front-panel description
- Rear-panel description

Features

A Cisco LRE CPE device, hereafter referred to as the *CPE*, is based on very-high-data-rate digital subscriber line (VDSL) technology. The CPE connects a computer or laptop to a Catalyst LRE switch at distances of up to 4921 feet (1500 meters) by using LRE technology over ordinary telephone lines.



Note

A CPE connects a computer or LAN to an LRE switch that transmits a high-speed signal over a telephone data connection. A Cisco LRE CPE converts a VDSL-based signal on the telephone line to an Ethernet signal to the computer.

The Cisco 575 LRE CPE, Cisco 576 LRE 997 CPE, and the Cisco 585 LRE CPE have these features:

- IEEE 802.3 10BASE-T compliance
- On the 575 LRE CPE and 576 LRE 997 CPE, one autonegotiating 10/100BASE-T Ethernet port

- On the 585 LRE CPE, four autonegotiating 10/100BASE-T Ethernet ports
- Status LEDs showing Ethernet activity and LRE link status
- Data rates of up to 15 Mbps at distances of up to 4921 feet (1500 meters)



Note Data rates are reduced for longer distances. Data rates are configured through a Catalyst LRE switch. Refer to the switch hardware installation guide and the switch software configuration guide for your switch model for more information.

- An internal splitter that allows regular telephone services, such as voice or Integrated Services Digital Network (ISDN), to travel on the same lines as LRE traffic.




Certain Cisco LRE CPE devices are not supported by certain Catalyst 2950 LRE switches. In [Table 1-1](#), *Yes* means that the CPE is supported by the switch; *No* means that the CPE is not supported by the switch.

Table 1-1 LRE Switch and CPE Compatibility Matrix

LRE Devices	Catalyst 2950ST-8 LRE switch	Catalyst 2950ST-24 LRE switch	Catalyst 2950ST-24 LRE 997 switch
Cisco 575 LRE CPE	Yes	Yes	No
Cisco 576 LRE 997 CPE	No	No	Yes
Cisco 585 LRE CPE	Yes	Yes	No

Figure 1-1 shows the Cisco LRE CPE models.

Figure 1-1 Cisco LRE CPE models

Version Number	Description	
575 LRE CPE	1 fixed autosensing 10/100 port	
576 LRE 997 CPE	1 fixed autosensing 10/100 port	
585 LRE CPE	4 fixed autosensing 10/100 ports	


89371

If additional telephone services such as voice or ISDN traffic will be carried on the same telephone lines, a *plain old telephone service* (POTS) splitter can be installed to separate LRE traffic from other telephone services. The splitter routes the high-frequency LRE data to the switch and the low-frequency telephone services to the private branch exchange (PBX) switch or public switched telephone network (PSTN).

For limitations and restrictions on when you use a POTS splitter with the Catalyst 2950 LRE switches and Cisco LRE CPE devices, see the “[Connecting to a Telephone](#)” section on page 2-24.

In a typical installation, a CPE is installed in each room of a multidwelling tenant building. The CPE data rates and profile settings are controlled by a Catalyst 2950 LRE switch. Figure 1-2 shows a typical LRE installation.

 Figure 1-2 Typical LRE Installation

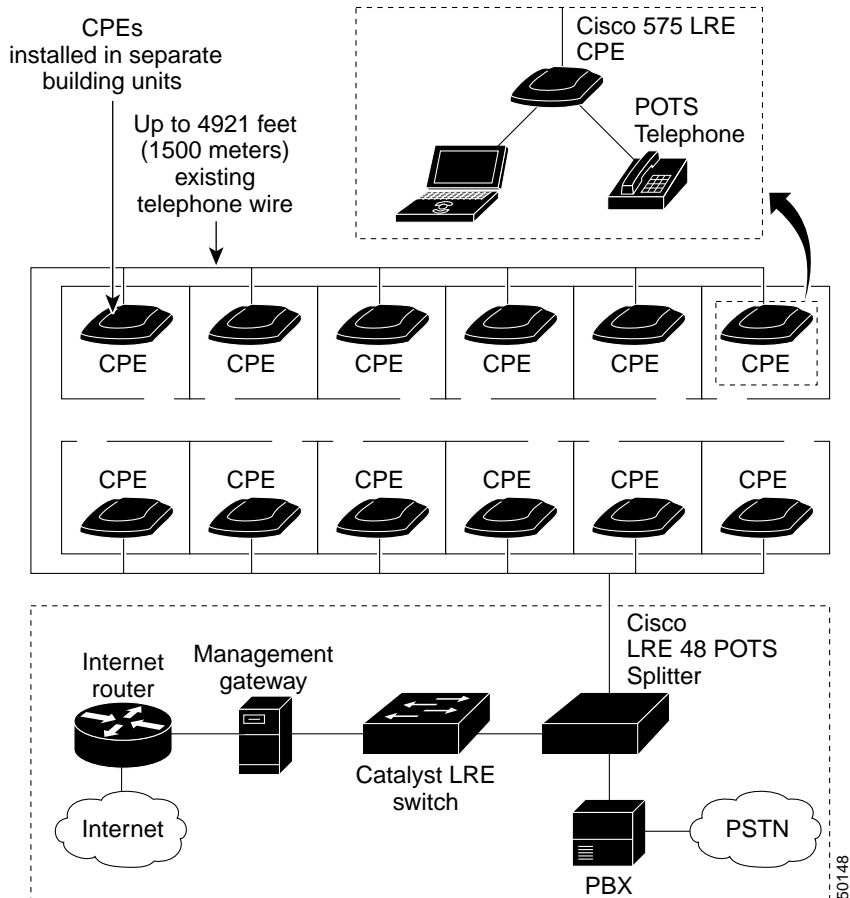

50148

For installations where telephone services will be routed to a PBX switch, you can install a Cisco LRE POTS Splitter (PS-1M-LRE-48). For more information about this POTS splitter, refer to the *Installation and Warranty Notes for the Cisco LRE 48 POTS Splitter*.

If the building does not use a PBX and telephone services are sent directly to an outside PSTN, you must provide a homologated POTS splitter. For more information about homologated POTS splitters, contact your Cisco sales representative.

For more information about installing a Catalyst LRE switch, refer to the switch hardware installation guide.

Front-Panel Description

Each Cisco LRE CPE has a READY LED and a POWER LED. The Cisco 575 LRE CPE and Cisco 576 LRE 997 CPE also have an ACT LED and an ETH LED. The Cisco 585 LRE CPE also has four LEDs, labeled ETH1 through ETH4.

[Figure 1-3](#) to [Figure 1-5](#) show the front panels of the CPEs. [Table 1-2](#) and [Table 1-3](#) list the front-panel LEDs and their meanings.

Figure 1-3 Front Panel of the Cisco 575 LRE CPE

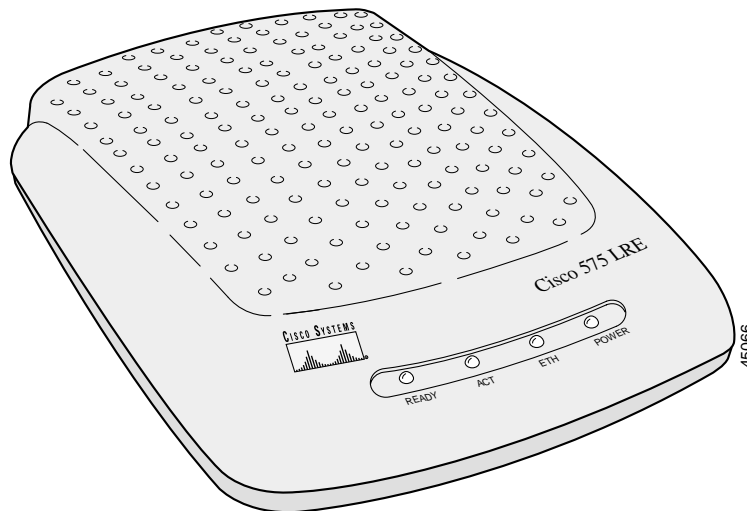 
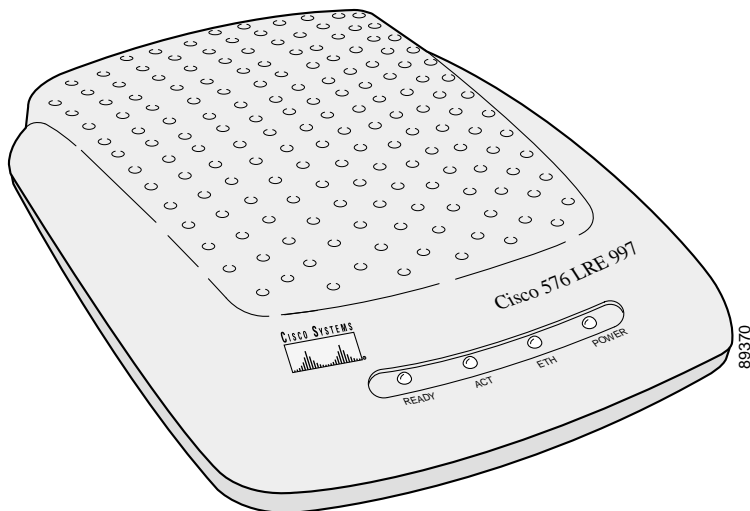 


Figure 1-4 Front Panel of the Cisco 576 LRE 997 CPE**Table 1-2** Cisco 575 LRE CPE and Cisco 576 LRE 997 CPE Front-Panel LEDs

LED	LED Color	Meaning
READY	Green	CPE link to LRE switch present
ACT	Flashing green	Ethernet activity
ETH	Green	Ethernet link present
POWER	Green	Power indicator

Figure 1-5 Front Panel of the Cisco 585 LRE CPE

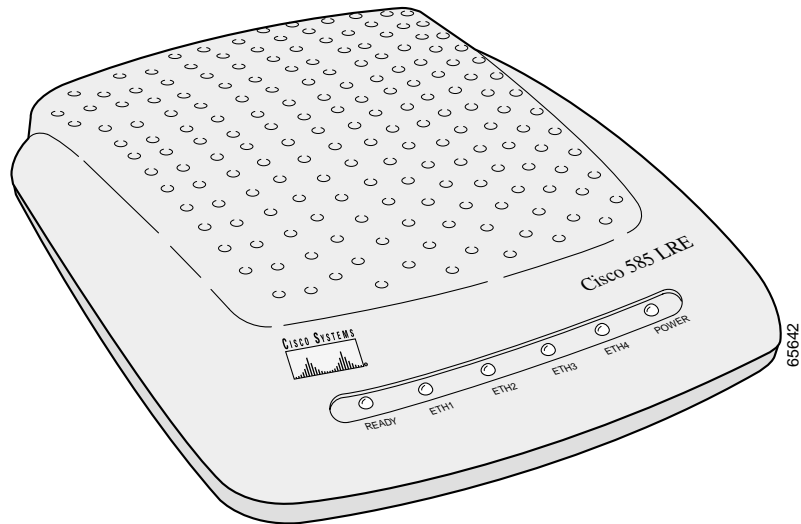 


Table 1-3 Cisco 585 LRE CPE Front-Panel LEDs

LED	LED Color	Meaning
READY	Green	CPE link to LRE switch present
ETH1	Green	Ethernet link to Ethernet port 1 present
	Flashing green	Ethernet activity on Ethernet port 1
ETH2	Green	Ethernet link to Ethernet port 2 present
	Flashing green	Ethernet activity on Ethernet port 2
ETH3	Green	Ethernet link to Ethernet port 3 present
	Flashing green	Ethernet activity on Ethernet port 3
ETH4	Green	Ethernet link to Ethernet port 4 present
	Flashing green	Ethernet activity on Ethernet port 4
POWER	Green	Power indicator

Rear-Panel Description

The LRE CPE rear panels have a power connector, two RJ-11 connectors, and, depending on the model, either one or four RJ-45 Ethernet connectors.

Figure 1-6 and Figure 1-7 show the rear panels of the CPEs. Table 1-4 and Table 1-5 list the rear-panel connectors and their descriptions.

Figure 1-6 Rear Panel of the Cisco 575 LRE CPE and Cisco 576 LRE 997 CPE


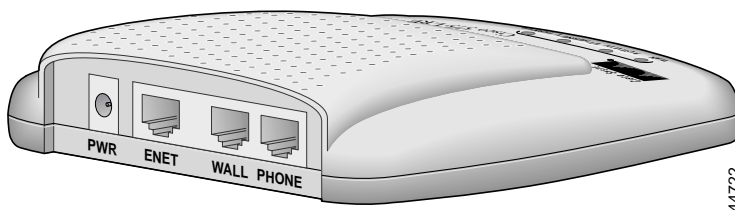 


Table 1-4 Cisco 575 LRE CPE and Cisco 576 LRE 997 CPE Rear-Panel Connectors

Connector Label	Connector Description
PWR	Power connector
ENET	RJ-45 connector for the Ethernet port
WALL	RJ-11 connector for the telephone wall jack
PHONE	RJ-11 connector for a telephone

Figure 1-7 Rear Panel of the Cisco 585 LRE CPE**Table 1-5** Cisco 585 LRE CPE Rear-Panel Connectors

PWR	Power connector
ETH4	RJ-45 connector for the Ethernet port 4
ETH3	RJ-45 connector for the Ethernet port 3
ETH2	RJ-45 connector for the Ethernet port 2
ETH1	RJ-45 connector for the Ethernet port 1
WALL	RJ-11 connector for the telephone wall jack
PHONE	RJ-11 connector for a telephone

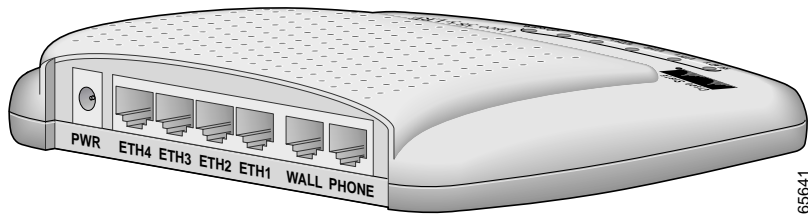 

Installation

This chapter describes how to install your customer premises equipment (CPE) device and how to interpret the LEDs to ensure proper operation. Read the topics, and perform these procedures in this order:

- [Preparing for Installation, page 2-2](#)
- [Verifying Package Contents, page 2-10](#)
- [Installing the CPE, page 2-11](#)
- [Connecting to a 10/100 Port, page 2-21](#)
- [Connecting to a Wall-Mounted Telephone Jack, page 2-23](#)
- [Connecting to a Telephone, page 2-24](#)
- [Connecting the Power Cord, page 2-27](#)
- [Attaching the Cable Lock, page 2-29](#)
- [Powering On the CPE, page 2-33](#)
- [Where to Go Next, page 2-33](#)

Preparing for Installation



Note

If you mount the CPE under a desk or on a wall, use the screws supplied with the CPE.



Caution

There are no serviceable parts inside the unit. Removing screws, cover, or otherwise dismantling the unit voids the warranty.

Certain CPE devices are not supported by certain Catalyst 2950 LRE switches. See [Table 1-1 on page 1-2](#) to determine which CPEs are supported by which LRE switches.

Warnings

These warnings are translated into several languages in [Appendix C, “Translated Safety Warnings.”](#)



Warning

Only trained and qualified personnel should be allowed to install or replace this equipment.



Warning

Read the installation instructions before you connect the system to its power source.



Warning

Before working on equipment that is connected to power lines, remove jewelry (including rings, necklaces, and watches). Metal objects will heat up when connected to power and ground and can cause serious burns or weld the metal object to the terminals.



Warning

The plug-socket combination must be accessible at all times because it serves as the main disconnecting device.



Warning

To prevent the system from overheating, do not operate it in an area that exceeds the maximum recommended ambient temperature of 104°F (40°C).



Warning

The device is designed to work with TN power systems.



Warning

This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that a fuse or circuit breaker no larger than 120 VAC, 15A U.S. (240 VAC, 10A international) is used on the phase conductors (all current-carrying conductors).



Warning

A voltage mismatch can cause equipment damage and may pose a fire hazard. If the voltage indicated on the label is different from the power outlet voltage, *do not connect the chassis to that receptacle.*



Warning

Do not work on the system or connect or disconnect cables during periods of lightning activity.



Warning

Ultimate disposal of this product should be handled according to all national laws and regulations.



Warning

Unplug the power cord before you work on a system that does not have an on/off switch.

EMC Regulatory Statements

U.S.A.

U.S. regulatory information for this product is in the front matter of this manual.

FCC Requirements

"Modifying the equipment without Cisco's authorization may result in the equipment no longer complying with FCC requirements for Class A or Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense."

Labeling Requirements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canada ICES 003, Issue 3

French

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

English

This Class B digital apparatus complies with Canadian ICES-003.

Japan VCCI

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

This is a Class B product based on the standard of Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

Korea

기종별	사용자 안내문
B급기기	이기는 가정용으로 전자파적합등록을한 기기로서 주거지역내에서는 물론 모든 지역에서 사용할 수 있습니다.

Class B Device. This device is registered for EMC requirements for residential use. This device can be used not only in residential areas but in all other areas.

Australian Telecommunications Compliance

To reduce the risk of electric shock in Australian Long-Reach Ethernet (LRE) installations, use only an Australian Communications Authority (ACA)-approved telephone and handset with a Cisco 575 LRE, 576 LRE 997, or 585 LRE customer premises equipment (CPE) device.

Warnings for Norway and Sweden

Cisco 575 Ethernet Connection Warning for Norway and Sweden

To reduce the risk of electric shock in Norwegian and Swedish LRE installations with a Cisco 575 LRE CPE device, do not connect the Ethernet port of the Cisco 575 LRE CPE to ports of other equipment as described in this warning:



Warning

To reduce the risk of electrical shock, do not connect the Ethernet port of the Cisco 575 Long-Reach Ethernet (LRE) customer premises equipment (CPE) device to ports of other equipment if those ports have protective earth conductors.

Advarsel

For å redusere risikoen for elektrisk støt, skal Ethernet-porten på Cisco 575 Long-Reach Ethernet (LRE)-kundeutstyr (CPE) ikke tilkoples porter på annet utstyr, hvis disse portene er utstyrt med vernejordingsledere.

Varning!

För att minska risken för elektrisk stöt, får inte Ethernet-porten på Cisco 575 LRE (Long-Reach Ethernet) CPE-enheter (customer premises equipment) anslutas till portar på annan utrustning om dessa portar är försedda med skyddsjordledare.

Cisco 576 LRE 997 Ethernet Connection Warning for Norway and Sweden

To reduce the risk of electric shock in Norwegian and Swedish LRE installations with a Cisco 576 LRE 997 CPE device, do not connect the Ethernet port of the Cisco 576 LRE 997 CPE to ports of other equipment as described in this warning:



Warning

To reduce the risk of electrical shock, do not connect the Ethernet port of the Cisco 576 Long-Reach Ethernet (LRE) 997 customer premises equipment (CPE) device to ports of other equipment if those ports have protective earth conductors.

Advarsel

For å redusere risikoen for elektrisk støt, skal Ethernet-porten på Cisco 576 Long-Reach Ethernet (LRE)-kundeutstyr 997 (CPE) ikke tilkoples porter på annet utstyr, hvis disse portene er utstyrt med vernejordingsledere.

Varning!

För att minska risken för elektrisk stöt, får inte Ethernet-porten på Cisco 576 LRE (Long-Reach Ethernet) 997 CPE-enheter (customer premises equipment) anslutas till portar på annan utrustning om dessa portar är försedda med skyddsjordledare.

Germany

Sicherheitshinweise

Lesen Sie diese Sicherheitshinweise sorgfältig durch.

- Lesen Sie alle Sicherheitshinweise und Warnungen auf dem Gerät.
- Stellen Sie das Gerät zur Installation auf eine flache, stabile Oberfläche. Durch ein Umfallen oder Herunterfallen des Geräts können Personen verletzt werden.
- Stellen Sie sicher, dass das Gerät mit der korrekten Spannung versorgt wird.
- Bei Geräten mit Netzanschlusskabel sollte sich die Steckdose in unmittelbarer Nähe des Geräts befinden und gut zugänglich sein.
- Das Netzkabel sollte so verlegt werden, dass niemand darauf treten kann. Stellen oder legen Sie keine Gegenstände auf das Netzkabel.
- Ziehen Sie vor der Reinigung des Geräts den Netzstecker. Benutzen Sie zur Reinigung keine Flüssig- oder Sprühreiniger. Verwenden Sie zur Reinigung ein leicht angefeuchtetes oder trockenes Tuch.
- Schützen Sie das Gerät vor Feuchtigkeit.
- Die Gehäuseöffnungen dienen zur freien Luftzirkulation und schützen das Gerät vor Überhitzung. Sorgen Sie dafür, dass die Öffnungen frei sind.
- Ziehen Sie den Netzstecker, wenn Sie das Gerät für einen längeren Zeitraum nicht benutzen, um Schäden durch transiente Überspannung zu vermeiden.
- Schütten Sie keine Flüssigkeiten in die Gehäuseöffnungen. Dadurch kann es zu Bränden und Elektroschocks kommen.
- Öffnen Sie das Gerät nicht. Aus Sicherheitsgründen sollte das Gerät nur durch qualifiziertes Fachpersonal geöffnet werden.
- Lassen Sie das Gerät in folgenden Fällen vom Kundendienstpersonal überprüfen:
 - Netzkabel oder Netzstecker sind beschädigt.
 - Es ist Flüssigkeit ins Geräteinnere gelangt.
 - Das Gerät war Feuchtigkeit ausgesetzt.

- Das Gerät funktioniert nicht richtig bzw. funktioniert nicht, wie im Benutzerhandbuch beschrieben.
- Das Gerät wurde fallen gelassen oder beschädigt.
- Das Gerät wurde offensichtlich beschädigt.
- Sorgen Sie dafür, dass das Gerät nicht ungeeigneten Umgebungsparametern ausgesetzt ist. Temperaturen über 45°C (113°F) können zur Beschädigung des Geräts führen.
- Der Schalleistungspegel ist in Bedienerposition in Übereinstimmung mit IEC 704-1: 1982 kleiner oder gleich 70 dB (A).
- Bewahren Sie das Hardware-Installationshandbuch für spätere Nachschlagezwecke auf.

Safety Instructions

Read these safety instructions carefully.

- Read all cautions and warnings on the equipment.
- Place this equipment on a flat, stable surface when installing. A drop or fall could cause injury.
- Make sure the correct voltage is connected to the equipment.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Place the power cord where people cannot step on it. Do not place anything over the power cord.
- Disconnect this equipment from the A/C outlet before cleaning it. Do not use liquid or sprayed detergent for cleaning. Use moisture sheet or cloth for cleaning.
- Keep this equipment away from humidity.
- The openings on the enclosure are for air convection and protect the equipment from overheating. Do not cover the openings.
- If the equipment will not be used for a long period of time, disconnect the equipment from A/C power to avoid any damage by transient overvoltage.
- Do not pour any liquid into opening. This could cause fire or electrical shock.

- Do not open the equipment. For safety reasons, the equipment should only be opened by qualified service personnel.
- If one of the following situations arises, get the equipment checked by a service personnel:
 - The power cord or plug is damaged.
 - Liquid has entered the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well, or you cannot get it to work according to user's manual.
 - The equipment has been dropped or damaged.
 - The equipment has obvious signs of breakage.
- Do not leave this equipment in an unconditioned environment. Temperatures above 45°C (113°F) can damage the equipment.
- The sound pressure level at the operator's position, according to IEC 704-1: 1982, is equal or less than 70 dB (A).
- Keep this hardware installation guide for later reference.

Verifying Package Contents

When you unpack the CPE, be sure that the package contains the items in this list. If any items are missing, notify your authorized Cisco sales representative.

- Cisco 575 LRE, 576 LRE 997, or 585 LRE CPE
- AC power adapter and power cord
- Mounting kit containing these items:
 - Four rubber feet for installing the CPE on a desktop
 - Cable lock for securing cables to the CPE
 - Three number-8 Phillips pan-head screws for mounting the CPE under a desk or on a wall and attaching cable lock to the CPE
 - Screw template for aligning screws

- One RJ-45-to-RJ-45, straight-through Ethernet cable (Cisco 575 LRE CPE and Cisco 576 LRE 997 CPE only)
- Product ownership registration card

**Note**

The CPE is sold individually or in multipackages of 6 and 24. The multipackages include only one hardware installation guide, one screw template, and one product ownership registration card for every six CPE devices.

Installing the CPE

You can install the CPE on or under a desk or on a wall. Before you begin the installation, decide where to mount the CPE by reviewing the illustrations in these sections:

- [Installing the CPE on a Desk \(without Mounting Screws\), page 2-11](#)
- [Installing the CPE on a Desk \(with Mounting Screws\), page 2-12](#)
- [Installing the CPE Under a Desk, page 2-15](#)
- [Installing the CPE on a Wall, page 2-18](#)

Installing the CPE on a Desk (without Mounting Screws)

The CPE can be installed on top of a desk with mounting screws or just placed on the desk. If you do not wish to install the CPE with mounting screws, follow these steps:

-
- Step 1** Locate the adhesive strip with the rubber feet in the CPE mounting kit.
 - Step 2** Remove the four rubber feet from the adhesive strip, and attach them to the recessed areas on the bottom of the unit. This prevents the CPE from sliding on the desktop.
 - Step 3** Place the CPE on the desktop.
-

Installing the CPE on a Desk (with Mounting Screws)

If you wish to secure the CPE on a desktop, you can use mounting screws. Follow these steps:

-
- Step 1** Position the desk so that it is at least 1/2 inch (12.7 millimeters) from the wall to allow space for cabling between the wall and the desk. (See [Figure 2-1](#).)
 - Step 2** Locate the screw template. The template is used to align the mounting screw holes and is also used as a guide to make sure the screws are installed into the desktop with proper clearance.
 - Step 3** Position the screw template on top of the desk so that the two side-by-side slots face the *front* of the desk (See [Figure 2-1](#).) This ensures that the cables will face the *rear* of the desk after the CPE is installed.




Note Do not attach the screw template to the desk yet.



Note Allow a minimum of three inches (7.6 centimeters) between the rear of the desk and the screw template so that there is enough room for the cables to clear the wall.

 Figure 2-1 Installing the Mounting Screws on Top of a Desk

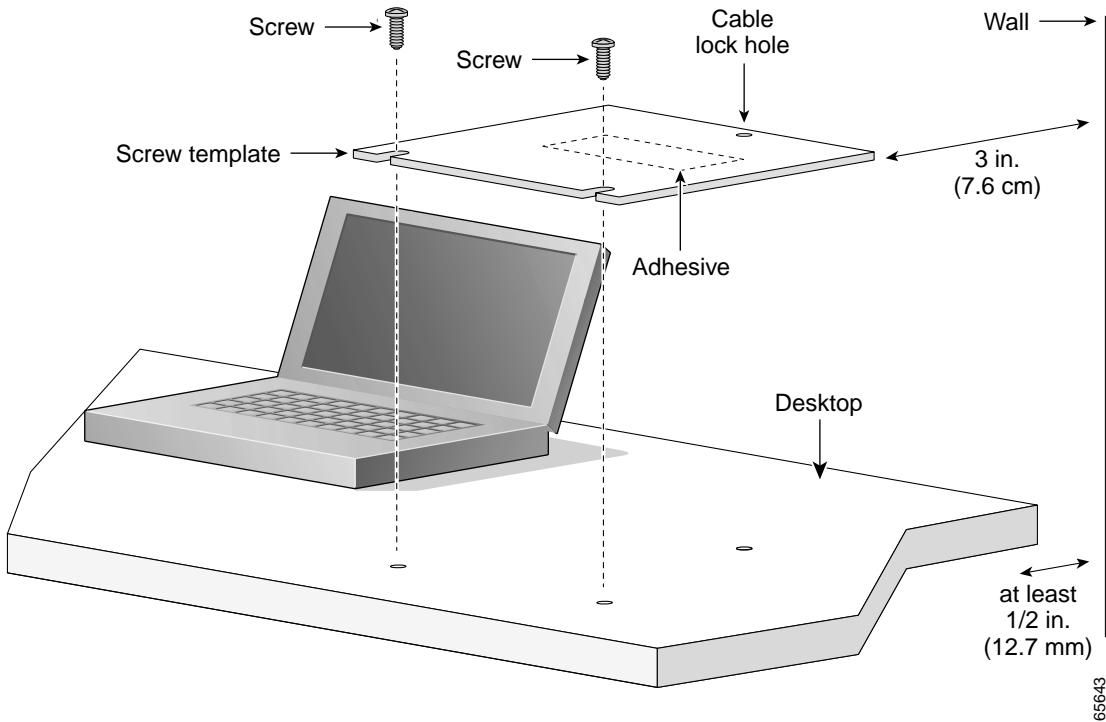
**Note**

The template has adhesive to hold it in place while you drill holes on the desktop. If you have purchased a 6- or 24-multipack, you will be using the same screw template to install each CPE. Do not use the adhesive. Instead, hold the template against the top of the desk while you drill the screw holes and insert the screws.

- Step 4** (Optional) Peel the adhesive strip off the bottom of the screw template, and attach it to the top of the desk.
- Step 5** Use a 0.144-inch (3.7-millimeters) or a #27 drill bit to drill 1/2-inch (12.7-millimeters) holes in the two screw template slots.

- Step 6** (Optional) If you wish to attach the cable lock after the cables are installed, drill another 1/2-inch (12.7-millimeters) hole in the cable lock hole. For more information, see the [“Attaching the Cable Lock”](#) section on page 2-29.
- Step 7** Insert two screws in the slots on the screw template, and tighten until they touch the top of the screw template.
- Step 8** Remove the screw template from the desk top.
- Step 9** Slide the CPE onto the mounting screws until it locks in place. (See [Figure 2-2](#).)

 Figure 2-2 Mounting the CPE On Top of a Desk

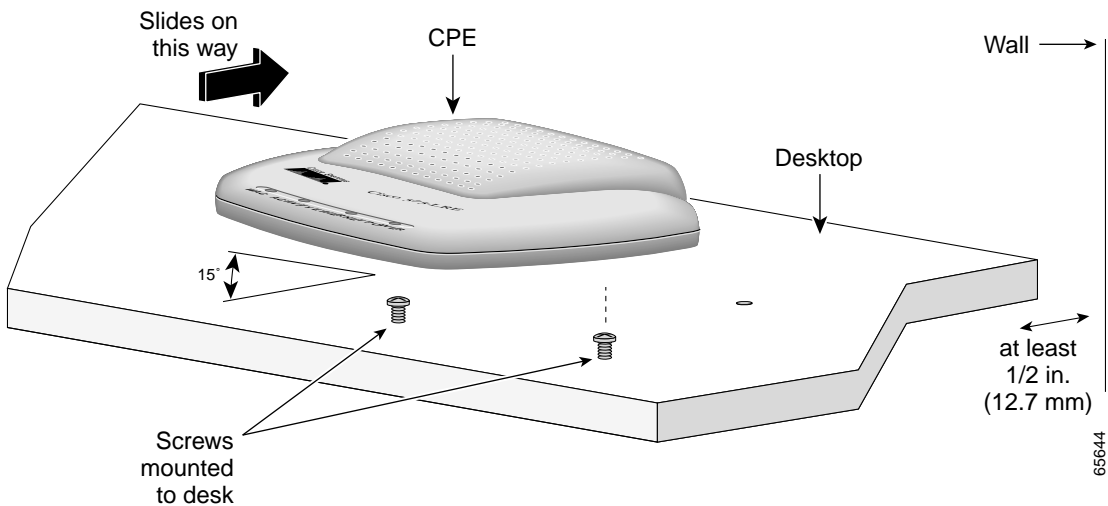

Note [Figure 2-2](#) shows a Cisco 575 LRE CPE being mounted on top of a desk. Follow the same procedure to mount a Cisco 576 LRE 997 or Cisco 585 LRE CPE on top of a desk.



Note The Cisco 575 LRE CPE, Cisco 576 LRE 997 CPE, and the Cisco 585 LRE CPE use the same screw template and mounting screws. One CPE model can be replaced with another, and the same mounting screws can be used.

Installing the CPE Under a Desk

**Tip**

We recommend that you attach the Ethernet, telephone, and power cables to the CPE before mounting it under a desk because the connectors are hidden from view after the CPE is installed. For more information, see the connection procedures beginning on page 2-17.

Follow these steps to install the CPE under a desk:

-
- Step 1** Position the desk so that it is at least 1/2 inch (12.7 millimeters) from the wall to allow space for cabling between the wall and the desk. (See [Figure 2-3](#), [Figure 2-4](#), and [Figure 2-8](#).)
- Step 2** Locate the screw template. The template is used to align the mounting screw holes and is also used as a guide to make sure the screws are installed under the desk with proper clearance.
- Step 3** Position the screw template underneath the desk so that the two side-by-side slots face the *front* of the desk (See [Figure 2-3](#).) This ensures that the cables will face the *rear* of the desk after the CPE is installed.


**Note**

Do not attach the screw template to the desk yet.

**Note**

Allow a minimum of three inches (7.6 centimeters) between the rear of the desk and the screw template so that there is enough room for the cables to clear the wall. (See [Figure 2-3](#).)

 Figure 2-3 Installing the Mounting Screws Under a Desk

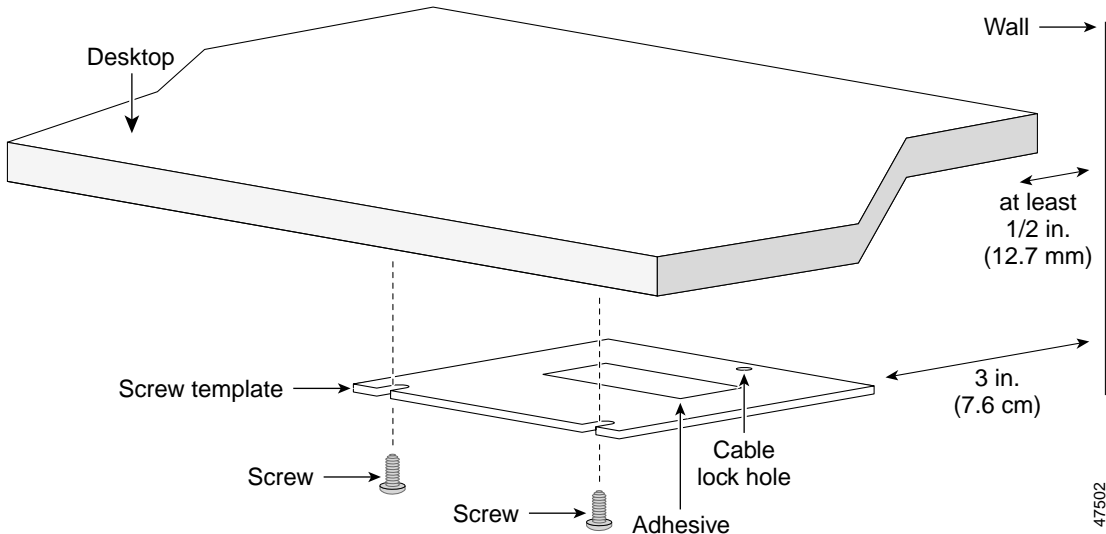**Note**

The template has adhesive to hold it in place while you drill holes underneath the desktop. If you have purchased a 6- or 24-multipack, you will be using the same screw template to install several CPEs. Do not use the adhesive. Instead, hold the template against the bottom of the desk while you drill the screw holes and insert the screws.

- Step 4** (Optional) Peel the adhesive strip off the bottom of the screw template, and attach it to the underside of the desk.
- Step 5** Use a 0.144-inch (3.7-millimeters) or a #27 drill bit to drill 1/2-inch (12.7-millimeters) holes in the two screw template slots.
- Step 6** (Optional) If you wish to attach the cable lock after the cables are installed, drill a 1/2-inch (12.7-millimeters) hole in the cable lock hole. For more information, see the [“Attaching the Cable Lock”](#) section on page 2-29.
- Step 7** Insert two screws in the slots on the screw template, and tighten until they touch the top of the screw template.
- Step 8** Remove the screw template from underneath the desk.
- Step 9** Slide the CPE onto the mounting screws until it locks in place. (See [Figure 2-4](#).)

Figure 2-4 Mounting the CPE Under a Desk

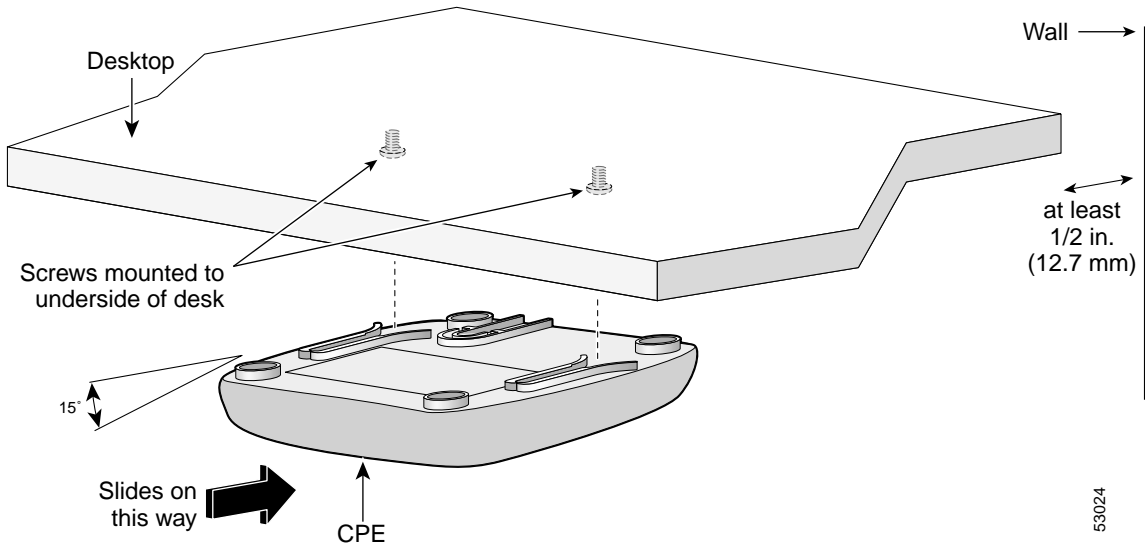 
**Note**

Figure 2-4 shows a Cisco 575 LRE CPE being mounted under a desk. Follow the same procedure to mount a Cisco 576 LRE 997 CPE or Cisco 585 LRE CPE under a desk.

Installing the CPE on a Wall

**Tip**

We recommend that you attach the Ethernet, telephone, and power cables to the CPE before mounting it on wall because the connectors might be hidden from view after the CPE is installed. For more information, see the connection procedures beginning with the [“Connecting to a 10/100 Port”](#) section on [page 2-21](#).

Step 1

Locate the screw template. The template is used to align the mounting screw holes.

**Note**

The template has adhesive to hold it in place while you drill holes in the wall. If you have purchased a 6- or 24-multipack, you will be using the same screw template to install each CPE. Do not use the adhesive. Instead, hold the template against the wall while you drill the screw holes and insert the screws.


Step 2

Position the screw template so that the cable lock hole is facing *toward* the floor. (See [Figure 2-5](#).) This ensures that the cables will face toward the floor after they are connected.

**Note**

Do not attach the screw template to the wall yet.

 Figure 2-5 Installing the Mounting Screws on a Wall

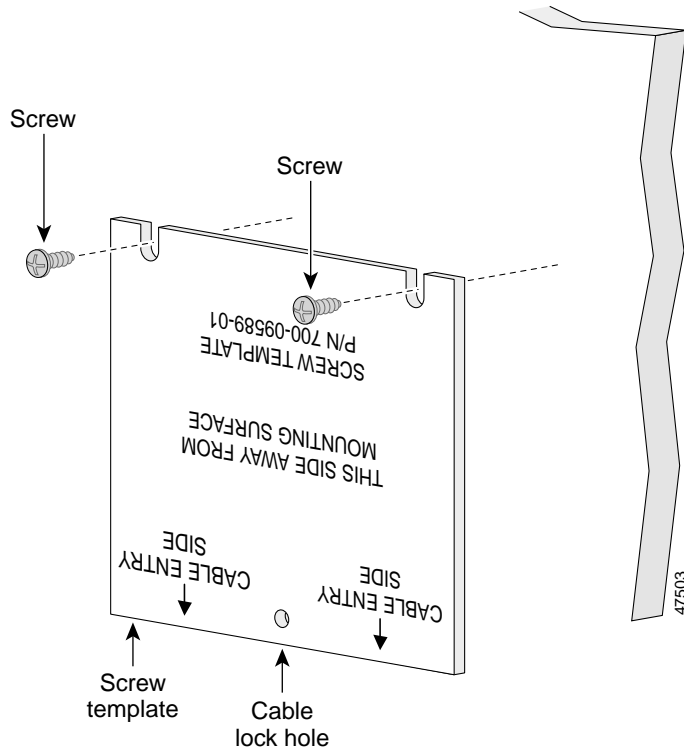

Step 3 (Optional) Peel the adhesive strip off the bottom of the screw template.




Note The template has adhesive to hold it in place while you drill holes in the wall. If you have purchased a 6- or 24-multipack, you will be using the same screw template to install several CPEs. Do not use the adhesive. Instead, hold the template against the wall while you drill the screw holes and insert the screws.

Step 4 Attach the screw template to the wall.

Step 5 Use a 0.144-inch (3.7-millimeters) or a #27 drill bit to drill 1/2-inch (12.7-millimeters) holes in the two screw template slots.

- Step 6** (Optional) If you wish to attach the cable lock after the cables are installed, drill a 1/2-inch (12.7-millimeters) hole in the screw template hole. For more information, see the [“Attaching the Cable Lock”](#) section on page 2-29.
- Step 7** Insert two screws in the slots on the screw template, and tighten until they touch the top of the screw template.
- Step 8** Remove the screw template from the wall.
- Step 9** Slide the CPE onto the screws until it locks in place. (See Figure 2-6.)

 Figure 2-6 *Installing the CPE On a Wall*

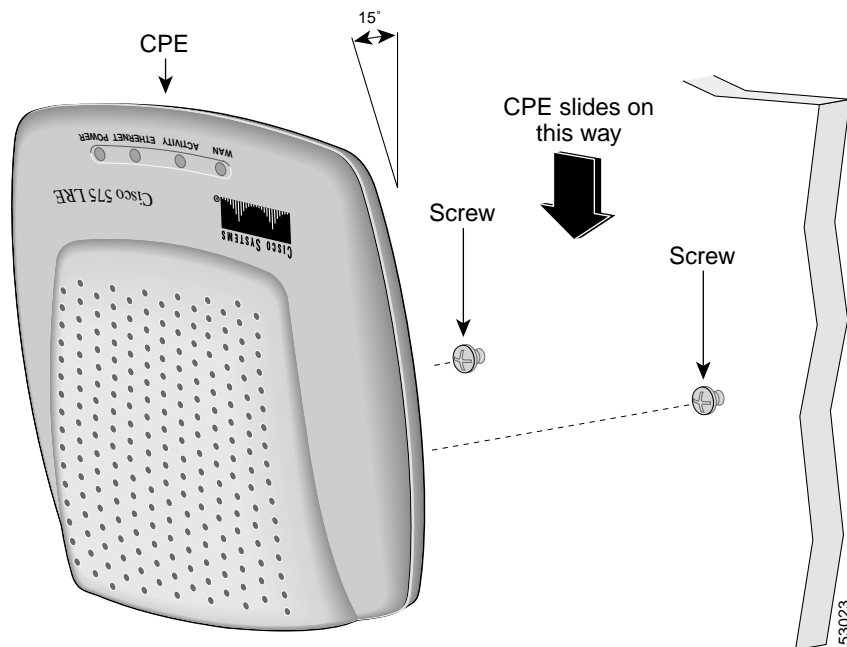

Note

Figure 2-6 shows a Cisco 575 LRE CPE being mounted on a wall. Follow the same procedure to mount a Cisco 576 LRE 997 CPE or Cisco 585 LRE CPE on a wall.

Connecting to a 10/100 Port

The LRE CPE 10/100 ports configure themselves to operate at the speed of the attached devices. Connecting devices that do not autonegotiate or that have had speed and duplex parameters manually set can reduce performance or result in no linkage.

If the attached ports do not support autonegotiation, you can explicitly set the speed and duplex parameters.

**Note**

The LRE CPE 10/100 ports are configured through a Catalyst LRE switch. Refer to the switch hardware installation guide and the switch software configuration guide for your switch model for more information.

**Note**

The Cisco 575 LRE CPE and Cisco 576 LRE 997 CPE have only one 10/100 port.

Follow these steps to connect to 10BASE-T and 100BASE-T devices:


Step 1

Connect a straight-through Category 5 cable to the ENET port on the Cisco 575 LRE CPE or Cisco 576 LRE 997 CPE. Connect a straight-through Category 5 cable to *one* of the ETH1 through ETH4 ports on the Cisco 585 LRE CPE. (See [Figure 2-7](#).)

**Note**

Ethernet cables are not included with the Cisco 585 LRE CPE.

 Figure 2-7 Connecting to a 10/100 LRE Port

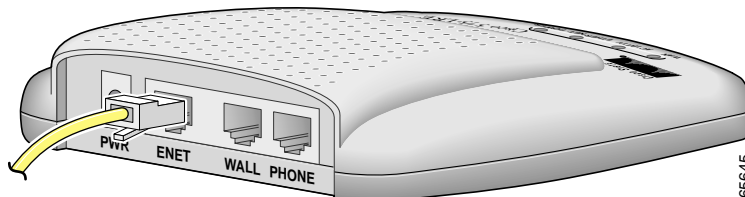


- Step 2** Connect the other end of the cable to the RJ-45 connector of the other device.
- If you are installing a Cisco 585 LRE CPE and are connecting several devices to it, repeat Steps 1 and 2 until all devices are connected.

**Note**

If you are installing a CPE in a hotel room where Internet services will be provided to hotel guests, laptop or desktop computers might not be available. If this is the case, connect one end of the Ethernet cable to the CPE, and leave the other end of the Ethernet cable on top of the desk. (See [Figure 2-8](#).)

 Figure 2-8 Ethernet Cable Lying on a Desktop

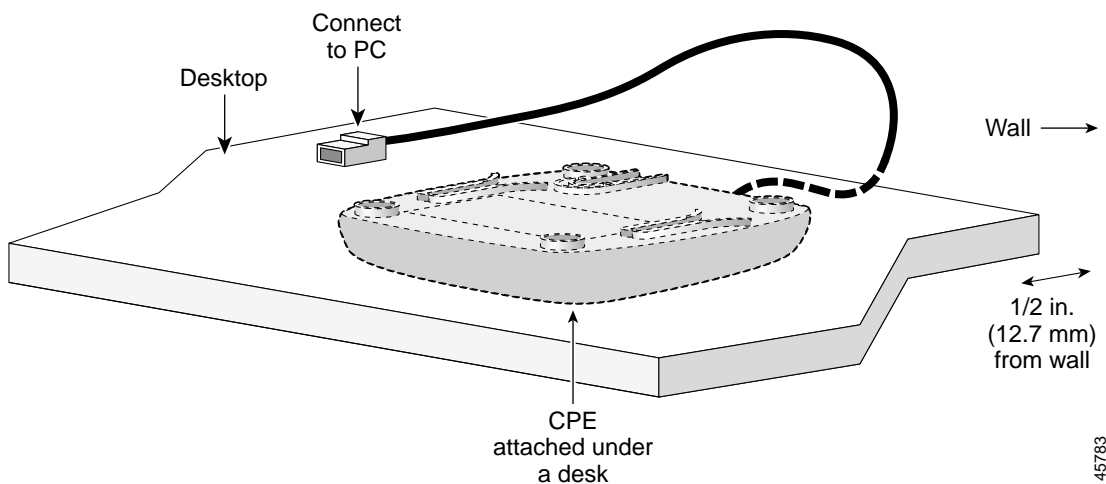

Connecting to a Wall-Mounted Telephone Jack

The CPE connects to a Catalyst LRE switch through the telephone wiring of a building. Follow these steps to connect the CPE to an LRE switch:

- Step 1** Connect one end of a telephone cord (not included) to the WALL port of the CPE. (See [Figure 2-9](#).)


**Caution**

To reduce the risk of fire, use only number 26 American Wire Gauge (AWG) or larger telephone cable.

**Caution**

Always disconnect all telephone lines from the wall outlet before servicing or disassembling this equipment.

 Figure 2-9 Connecting to a WALL port

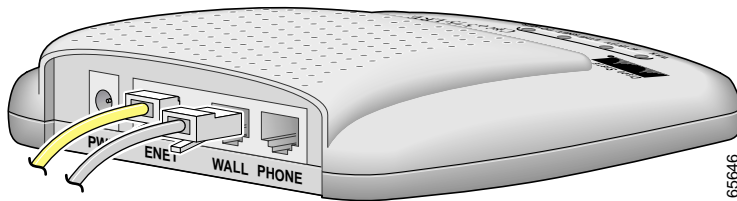**Note**

We recommend using a telephone cable that has a three-pair, rollover configuration.

- Step 2** Connect the other end of the telephone cord to the wall telephone jack.

Connecting to a Telephone

These limitations and restrictions apply when you use a plain old telephone service (POTS) splitter with the Catalyst 2950 LRE switches and Cisco LRE CPE devices:

- The Catalyst 2950ST-8 LRE switch, Catalyst 2950ST-24 LRE switch, Cisco 575 LRE CPE, and Cisco 585 LRE CPE are designed to share lines with analog, Integrated Services Digital Network (ISDN), and digital private branch exchange (PBX) switch telephones that use the 0 to 700 kHz frequency range.


Digital telephones connected to digital PBX switches that use frequencies above 700 kHz do not work when sharing a line with LRE signals. Due to the proprietary nature of digital PBX switches, some digital PBX switch services use frequencies above 700 kHz.

- You can use a Cisco LRE 48 POTS Splitter with a Catalyst 2950ST-8 LRE switch, Catalyst 2950ST-24 LRE switch, Cisco 575 LRE CPE, and Cisco 585 LRE CPE. For installation instructions, refer to the *Installation and Warranty Notes for the Cisco LRE 48 POTS Splitter*.
- The Catalyst 2950ST-24 LRE 997 switch and Cisco 576 LRE 997 CPE are designed to share lines with analog and ISDN telephones that use the 0 to 120 kHz frequency range.
- We recommend that *you do not use* a Cisco LRE 48 POTS Splitter with a Catalyst 2950ST-24 LRE 997 switch and a Cisco 576 LRE 997 CPE as shown in [Figure 2-10](#). Only traffic in a specific frequency range can be sent to and from the devices attached to the CPE.

In [Figure 2-10](#), only traffic from 0 to 120 kHz can pass from a device attached to the CPE, such as a computer or telephone, to the CPE, a splitter, and a switch. In the reverse direction, traffic from 0 to 700 kHz can pass through the switch and splitter to the CPE, but only traffic from 0 to 120 kHz can pass through the CPE to a computer or a telephone.

For more information, refer to the *Installation and Warranty Notes for the Cisco LRE 48 POTS Splitter*.

 Figure 2-10 Limitations Using a Cisco LRE 48 POTS Splitter with a Catalyst 2950ST-24 LRE 997 Switch and Cisco 576 LRE CPE

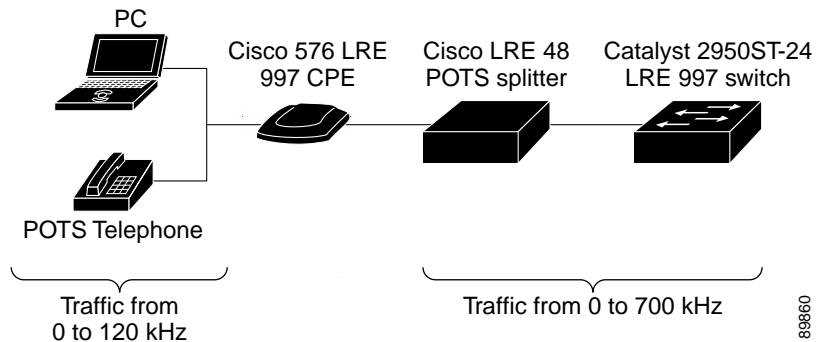

09890

Follow these steps to connect the CPE to a telephone:

- Step 1** Connect one end of a telephone cord (not included) to the PHONE port of the CPE. (See Figure 2-11.)



Caution

To reduce the risk of fire, use only number 26 AWG or larger telephone cable.



Caution

Always disconnect all telephone lines from the wall outlet before servicing or disassembling this equipment.




Note

Use a standard telephone cord with RJ-11 connectors on both ends.

Step 2 Connect the other end of the telephone cord to a telephone.

 Figure 2-11 Wall Jack to Telephone Connection through an LRE CPE

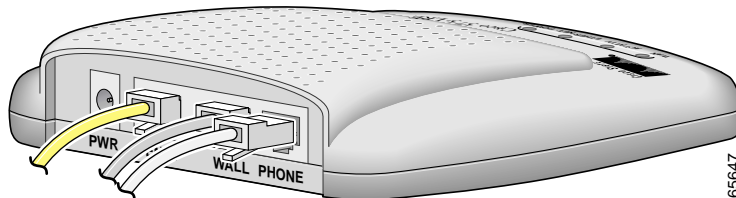

Note If you are connecting a Cisco 585 LRE CPE to a Cisco IP Phone, connect one end of a straight-through Ethernet cable to one of the 10/100 ports on the CPE and the other end of the cable to the Cisco IP Phone.



Note


If you have other telephones that share the same line but that are not connected through the CPE, we recommend connecting those telephones through a microfilter with a 300-ohm termination. Microfilters can improve voice call quality when voice and data equipment are using the same telephone line. They also prevent nonfiltered telephone rings or nonfiltered telephone transitions (such as on-hook to off-hook) from interrupting the LRE connection. For more information about microfilters, contact your Cisco sales representative.

Connecting the Power Cord

Follow these steps to connect the power cord to the CPE:

- Step 1** Connect the power cord to the power connector on the CPE rear panel. (See [Figure 2-12.](#))

 Figure 2-12 Connecting the Power Cord

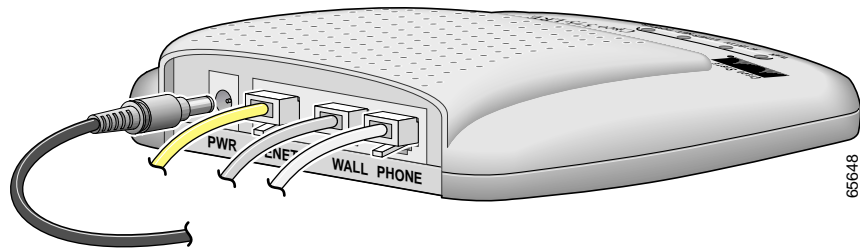


Caution

Use only the AC power cord and adapter shipped with the CPE.

- Step 2** Slide the power cord under the hooks on the bottom of the CPE. (See [Figure 2-13.](#))

 Figure 2-13 Securing a Power Cord to the Bottom of the CPE

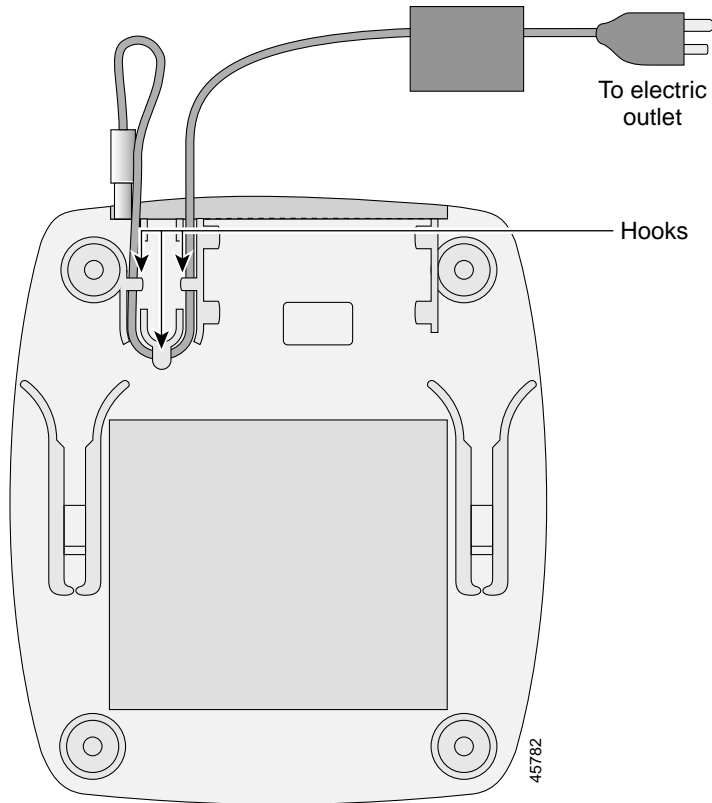

Caution

Do not connect the AC adapter into a wall power outlet yet. Refer to the [“Powering On the CPE”](#) section on page 2-33.


Attaching the Cable Lock

The optional cable lock provides extra security to prevent someone from easily removing the CPE from a desk or wall.

To install the cable lock, follow these steps:

-
- Step 1** Locate the cable lock in the accessory kit.
 - Step 2** Slide the cable lock onto the CPE until it clicks in place. (See [Figure 2-14](#) and [Figure 2-15](#).)

 
Figure 2-14 Attaching the Cable Lock

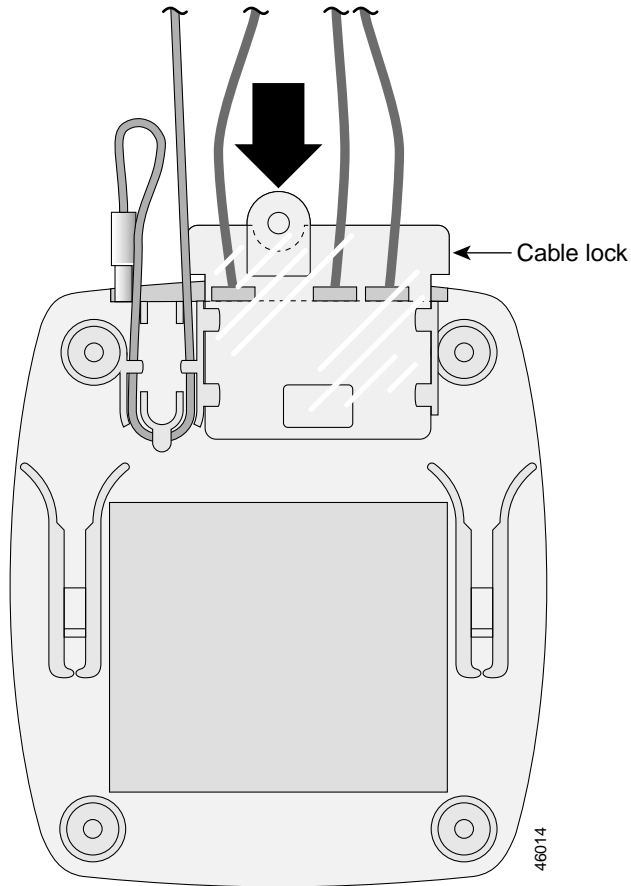

Note

[Figure 2-14](#) shows a cable lock being installed on a Cisco 575 LRE CPE. Follow the same procedure to install a cable lock on a Cisco 576 LRE 997 CPE or Cisco 585 LRE CPE.

 Figure 2-15 Cable Lock Installed on CPE (Side View)

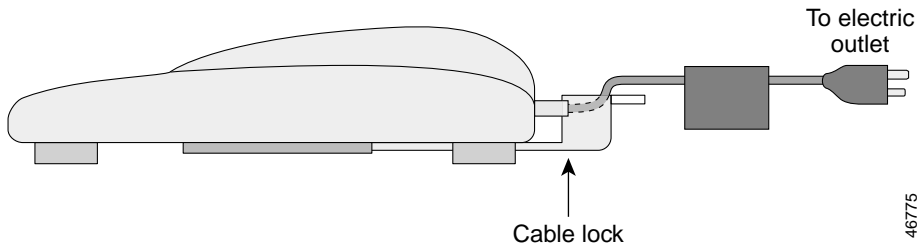


Step 3 Insert the supplied screw into the cable-lock mounting hole. (See [Figure 2-16](#).)



Note [Figure 2-16](#) shows a cable lock being secured to a Cisco 575 LRE CPE. Follow the same procedure to secure a cable lock to a Cisco 576 LRE 997 CPE or Cisco 585 LRE CPE.

 Figure 2-16 *Securing the Cable Lock to a Desk- or Wall-Mounted CPE with Mounting Screw*

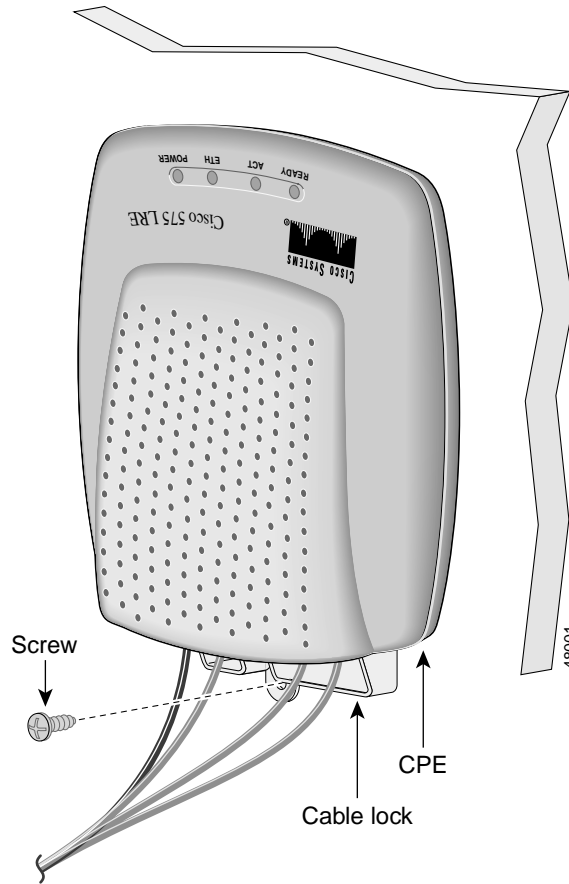

Powering On the CPE

Follow these steps to connect the CPE to AC power:

-
- Step 1** Connect the AC cord to a power outlet.
 - Step 2** Ensure that the power LED is green. If it is not green, see [Chapter 3, “Troubleshooting,”](#) to determine a course of action.
-

The ETH link LED (on the Cisco 575 LRE CPE or Cisco 576 LRE 997 CPE), the ETH1 through ETH4 LEDs (on the Cisco 585 LRE CPE), and the READY LED turn on when the appropriate equipment is connected.

Where to Go Next

CPE configuration, data speed settings, and monitoring are controlled from a Catalyst LRE switch. For more information, refer to the switch hardware installation guide and the switch software configuration guide for your switch model.



Troubleshooting

The LEDs on the customer premises equipment (CPE) device provide troubleshooting information. They show power-related problems, port-connectivity problems, and overall CPE performance. For a full description of the LEDs, see the [“Front-Panel Description” section on page 1-5](#).

The Long-Reach Ethernet (LRE) link between the CPE and the Catalyst LRE switch can be monitored from the switch. Refer to the switch hardware installation guide and the switch software configuration guide for your switch model for more information.

Table 3-1 lists the CPE problems that you might encounter and their solutions.

Table 3-1 Common Problems and Their Solutions

Symptom	Possible Cause	Resolution
POWER LED not on	AC power adapter and cable is loose or not connected properly.	Reconnect the power adapter and cable into the wall outlet and the CPE.
	Note Defective AC power adapter and cable. Do not attempt to open or repair the power adapter. Replace the AC power adapter and cable only with a new one ordered from your Cisco sales representative.	Replace the AC power adapter and cable.

Table 3-1 Common Problems and Their Solutions (continued)

Symptom	Possible Cause	Resolution
READY LED not on	Telephone cable is loose or is not connected properly.	Reconnect the phone cable into the phone wall jack and the CPE.
	Telephone cable is defective.	Replace the telephone cable.
	Cable trunking is defective.	Repair the cable trunking, or select an alternative pair.
	<ol style="list-style-type: none"> CPE is not communicating with LRE switch. CPE might be attempting to exceed the rate or reach selected by the LRE switch. 	Verify switch and upstream network status.
ETH LED or ETH_n LED not on	Ethernet cable is loose or is not connected properly.	Reconnect the Ethernet cable to the CPE and your PC or your laptop.
	CPE is not communicating with the Ethernet card in the 10/100 device.	Reboot the device.
	Incorrect or defective Ethernet cable. <ul style="list-style-type: none"> A crossover cable was used instead of the included straight-through cable. The Ethernet cable is wired incorrectly or is defective. 	<ul style="list-style-type: none"> For the correct pinouts and the proper use of straight-through cables, see the “Ethernet Straight-Through Cable Pinouts” section on page B-5. Replace with a tested good cable.
ACTIVITY LED or ETH_n LED not blinking	Data is not being transferred between the CPE and the 10/100 device.	Verify laptop or PC network configuration.

Table 3-1 Common Problems and Their Solutions (continued)

Symptom	Possible Cause	Resolution
No connectivity	Incorrect or bad Ethernet cable. <ul style="list-style-type: none"> A crossover cable was used when a straight-through cable was required or the reverse. The Ethernet cable is wired incorrectly or is defective. 	<ul style="list-style-type: none"> For the correct pinouts and the proper use of straight-through cables, see the “Ethernet Straight-Through Cable Pinouts” section on page B-5. Replace with a tested good cable.
	Data service is unavailable.	Verify switch and upstream network status.
No connectivity to telephone	Incorrect or bad cable. <ul style="list-style-type: none"> Incorrect or defective rollover or straight-through telephone cable. A rollover cable was used when a straight-through cable was required or the reverse. 	<ul style="list-style-type: none"> Replace with a tested good cable. For the correct pinouts and the proper use of rollover and straight-through telephone cables, see the “Telephone Straight-Through and Rollover Cable Pinouts” section on page B-6.
	Telephone is sensitive to polarity inversion.	Ensure that the CPE PHONE jack pinouts match the wall jack pinouts.

Table 3-1 Common Problems and Their Solutions (continued)

Symptom	Possible Cause	Resolution
No connectivity to telephone (continued)	Telephone uses signals above 700 kHz.	Verify that telephone requires frequencies above 700 kHz. If so, there is no resolution. Contact the Cisco Technical Assistance Center (TAC).
	Telephone uses signals above 120 kHz (Cisco 576 LRE 997 CPE only)	Verify that telephone requires frequencies above 120 kHz. If so, there is no resolution. Contact the Cisco Technical Assistance Center (TAC).



Technical Specifications

[Table A-1](#) lists the technical specifications for the Cisco 575 LRE CPE and the Cisco 576 LRE 997 CPE. [Table A-2](#) lists the technical specifications for the Cisco 585 LRE CPE. [Table A-3](#) and [Table A-4](#) list the agency approvals for EMI and safety.

Table A-1 *Technical Specifications for the Cisco 575 LRE CPE and Cisco 576 LRE 997 CPE*

Environmental Ranges	
Operating temperature	32 to 113°F (0 to 45°C)
Storage temperature	-13 to 158°F (-25 to 70°C)
Relative humidity	10 to 85% (noncondensing)
Operating altitude	Up to 10,000 ft (3000 m)
Storage altitude	Up to 15,000 ft (4570 m)
Power Requirements	
DC input voltages	+5V ⁼⁼ @1A
AC input voltage	100–240 VAC, 50–60 Hz
Physical Dimensions	
Weight	0.5 lb (0.2 kg)
Dimensions (H x W x D)	1.7 x 5 x 6 in. (4.3 x 12.7 x 15.2 cm)

Table A-2 *Technical Specifications for the Cisco 585 LRE CPE*

Environmental Ranges	
Operating temperature	32 to 113°F (0 to 45°C)
Storage temperature	-13 to 158°F (-25 to 70°C)
Relative humidity	10 to 85% (noncondensing)
Operating altitude	Up to 10,000 ft (3000 m)
Storage altitude	Up to 15,000 ft (4570 m)
Power Requirements	
DC input voltages	+12V _{DC} @ 1A
AC input voltage	100–240 VAC, 50–60 Hz (worldwide) 108-132 VAC, 60 Hz (USA) 90-110 VAC, 50 Hz (Japan) 198-242 VAC, 50 Hz (China) 216-264 VAC, 50 Hz (UK, Australia) 207-253 VAC, 50 Hz (Europe) 192-242 VAC, 60 HZ (Korea)
Physical Dimensions	
Weight	0.75 lb (0.3 kg)
Dimensions (H x W x D)	1.7 x 5.9 x 6.8 in. (4.2 x 15 x 17.3 cm)

Table A-3 Agency Approvals for Cisco 575 LRE CPE and 585 LRE CPE

Safety	EMI
UL/CSA 60950	FCC Part 15 Class B
IEC 60950/EN 60950	EN 55022 Class B (CISPR 22 Class B)
AS/NZS 3260, TS001	VCCI Class B
CE	AS/NZS 3548 Class B
	BCIQ
	CE

Table A-4 Agency Approvals for Cisco 576 LRE 997 CPE

Safety	EMI
UL/CSA 60950	FCC Part 15 Class B
IEC 60950/EN 60950	EN 55022 Class B (CISPR 22 Class B)
CE	EN 55024: ITE Immunity Standard. (CE Mark), 1998
	CE





Connector and Cable Specifications


This appendix describes the and customer premises equipment (CPE) connectors and the cables that you use to connect the CPE to other devices.

Connector Specifications

10/100 Ports

The CPE 10/100 ports (the ENET port on the Cisco 575 LRE CPE and the Cisco 576 LRE 997 CPE and on the ENET1 through ENET4 ports on the Cisco 585 LRE CPE) use RJ-45 connectors with Ethernet pinouts. The ports have the transmit (TD) and receive (RD) signals internally crossed so that a straight-through Ethernet cable (included only with the Cisco 575 LRE CPE and Cisco 576 LRE 997 CPE) can be attached to the port. [Figure B-1](#) shows the pinouts.

Figure B-1 RJ-45 Connector Pinouts

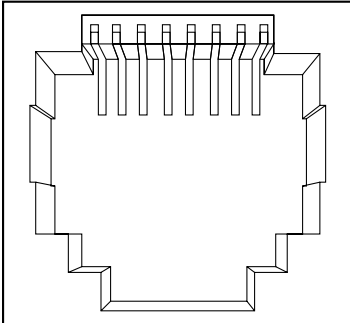Pin	Label	1 2 3 4 5 6 7 8
1	RD+	
2	RD-	
3	TD+	
4	NC	
5	NC	
6	TD-	
7	NC	
8	NC	


54968

When connecting a CPE 10/100 port to a PC or laptop, you must use a straight-through Ethernet cable wired for 10BASE-T or 100BASE-T. [Figure B-5](#) shows the straight-through cable schematics.

WALL Port

The WALL port uses an RJ-11 telephone connector to connect to the Long-Reach Ethernet (LRE) switch. See [Figure B-2](#) for the connector pinouts.

Figure B-2 WALL Port Connector Pinouts

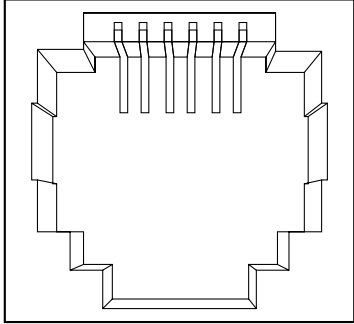Pin	Label	1 2 3 4 5 6
1	Pass-through 6	
2	Pass-through 5	
3	LRE and phone ring	
4	LRE and phone tip	
5	Pass-through 2	
6	Pass-through 1	

60542

PHONE Port

The PHONE port uses an RJ-11 connector. LRE operation only requires one wire pair (pins 3 and 4) to carry LRE traffic. Therefore, you can use one-, two-, or three-pair telephone cable. However, you must use a two- or three-pair cable for telephones that carry power or other services. We recommend using a three-pair telephone cable to connect a telephone to the CPE. (See [Figure B-6](#) and [Figure B-7](#).)




Note

Pins 3 and 4 are internally crossed between the CPE WALL port and the CPE PHONE port on the Cisco 575 LRE CPE, the Cisco 576 LRE 997 CPE, and the Cisco 585 LRE CPE devices.

Pins 1, 2, 5, and 6 on the WALL port of the Cisco 575 LRE CPE and the Cisco 576 LRE 997 CPE are internally connected to the corresponding pins of the PHONE port. (See [Figure B-3](#).)


Figure B-3 Cisco 575 LRE CPE and Cisco 576 LRE 997 CPE PHONE Port Connector Pinouts

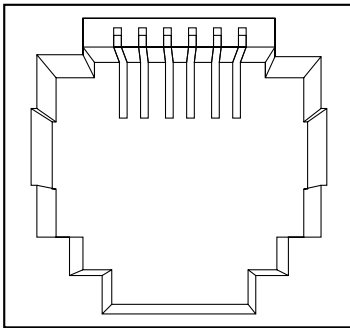Pin	Label	1 2 3 4 5 6
1	Pass-through 1	
2	Pass-through 2	
3	Phone tip	
4	Phone ring	
5	Pass-through 5	
6	Pass-through 6	

74242

Pins 1, 2, 5, and 6 on the WALL port of the Cisco 585 LRE CPE are internally crossed. (See [Figure B-4](#).)

Figure B-4 Cisco 585 LRE CPE PHONE Port Connector Pinouts

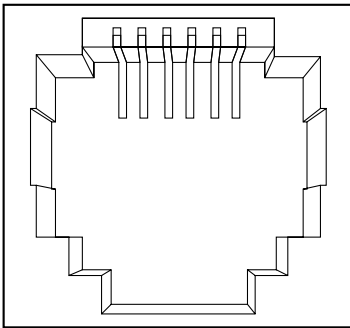Pin	Label	1 2 3 4 5 6
1	Pass-through 6	
2	Pass-through 5	
3	Phone tip	
4	Phone ring	
5	Pass-through 2	
6	Pass-through 1	

60543



Note

Some single-line or multiline telephones are sensitive to polarity inversion. In these cases, pay special attention to the CPE PHONE port pinouts.


Cable Specifications

This section describes the cables that you use to connect the CPE to other devices.

Ethernet Straight-Through Cable Pinouts

The schematics of a straight-through Ethernet cable (included with the Cisco 575 LRE CPE and the Cisco 576 LRE 997 CPE) are shown in [Figure B-5](#).

 Figure B-5 *Ethernet Straight-Through Cable Pinouts*

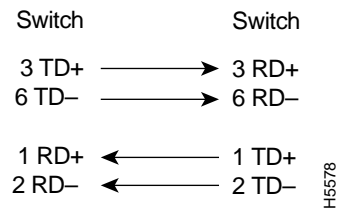

Telephone Straight-Through and Rollover Cable Pinouts

The schematics of straight-through and rollover telephone cables are shown in [Figure B-6](#) and [Figure B-7](#).

Figure B-6 Telephone Straight-Through Cable Schematic


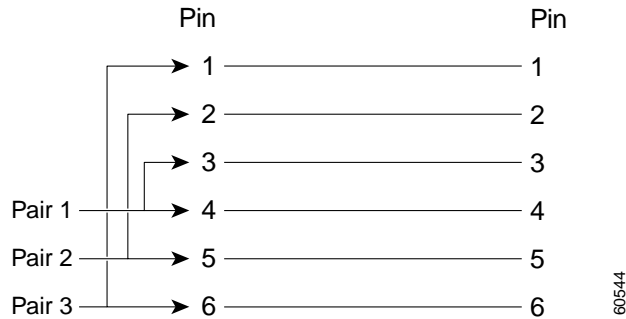 



Figure B-7 Telephone Rollover Cable Schematic

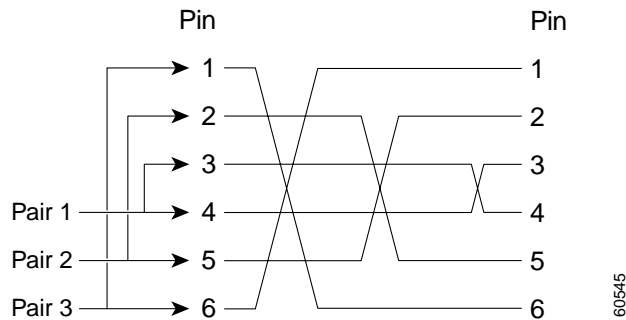 

Identifying a Telephone Rollover Cable

You can identify a telephone rollover cable by comparing the two RJ-21 connectors at each end of the cable. Hold the cable ends side-by-side, with the tab facing away from you. The wire connected to the pin on the outside of the left RJ-21 connector should be the same color as the wire connected to the pin on the outside of the right RJ-21 connector. (See [Figure B-8](#).)

 Figure B-8 Identifying a Telephone Rollover Cable

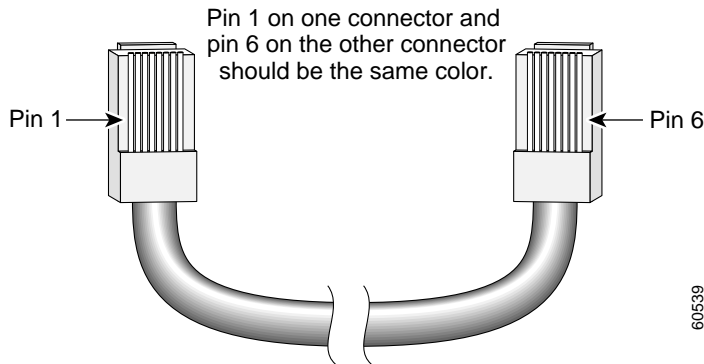



Translated Safety Warnings

This appendix repeats in multiple languages the warnings in this guide.

Qualified Personnel Warning



Warning

Only trained and qualified personnel should be allowed to install or replace this equipment.

Waarschuwing

Installatie en reparaties mogen uitsluitend door getraind en bevoegd personeel uitgevoerd worden.

Varoitus

Ainoastaan koulutettu ja pätevä henkilökunta saa asentaa tai vaihtaa tämän laitteen.

Avertissement

Tout installation ou remplacement de l'appareil doit être réalisé par du personnel qualifié et compétent.

Achtung

Gerät nur von geschultem, qualifiziertem Personal installieren oder auswechseln lassen.

Figyelem!

A berendezést csak szakképzett személy helyezheti üzembe és cserélheti ki.

■ Installation Warning

Avvertenza	Solo personale addestrato e qualificato deve essere autorizzato ad installare o sostituire questo apparecchio.
Advarsel	Kun kvalifisert personell med riktig oppl�ring b�r montere eller bytte ut dette utstyret.
Aviso	Este equipamento dever� ser instalado ou substituído apenas por pessoal devidamente treinado e qualificado.
¡Atención!	Estos equipos deben ser instalados y reemplazados exclusivamente por personal t�cnico adecuadamente preparado y capacitado.
Varning	Denna utrustning ska endast installeras och bytas ut av utbildad och kvalificerad personal.

Предупреждение Установку и замену этого оборудования может осуществлять только специально обученный квалифицированный персонал.

警告 只有经过培训且具有资格的人员才能安装或更换此设备。

警告 この装置の設置または交換は、訓練を受けた相応の資格のある人のみが行ってください。

Installation Warning



Warning

Read the installation instructions before connecting the system to the power source.

Waarschuwing

Raadpleeg de installatie-instructies voordat u het systeem op de voedingsbron aansluit.

Varoitus	Lue asennusohjeet ennen järjestelmän yhdistämistä virtalähteeseen.
Attention	Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.
Warnung	Vor dem Anschließen des Systems an die Stromquelle die Installationsanweisungen lesen.
Figyelem!	Mielőtt áramforráshoz csatlakoztatná a rendszert, olvassa el az üzembe helyezési útmutatót!
Avvertenza	Consultare le istruzioni di installazione prima di collegare il sistema all'alimentatore.
Advarsel	Les installasjonsinstruksjonene før systemet kobles til strømkilden.
Aviso	Leia as instruções de instalação antes de ligar o sistema à fonte de energia.
¡Advertencia!	Lea las instrucciones de instalación antes de conectar el sistema a la red de alimentación.
Varning!	Läs installationsanvisningarna innan du kopplar systemet till strömförsörjningsenheten.
Предупреждение	Перед подключением устройства к источнику электропитания ознакомьтесь с данной инструкцией по установке.
警告	在将系统与电源连接之前，请仔细阅读安装说明。
警告	必ず設置手順を読んでから、システムを電源に接続してください。

Jewelry Removal Warning



Warning

Before working on equipment that is connected to power lines, remove jewelry (including rings, necklaces, and watches). Metal objects will heat up when connected to power and ground and can cause serious burns or weld the metal object to the terminals.

Waarschuwing

Alvorens aan apparatuur te werken die met elektrische leidingen is verbonden, sieraden (inclusief ringen, kettingen en horloges) verwijderen. Metalen voorwerpen worden warm wanneer ze met stroom en aarde zijn verbonden, en kunnen ernstige brandwonden veroorzaken of het metalen voorwerp aan de aansluitklemmen lassen.

Varoitus

Ennen kuin työskentelet voimavirtajohtoihin kytkettyjen laitteiden parissa, ota pois kaikki korut (sormukset, kaulakorut ja kellot mukaan lukien). Metalliesineet kuumenevat, kun ne ovat yhteydessä sähkövirran ja maan kanssa, ja ne voivat aiheuttaa vakavia palovammoja tai hitsata metalliesineet kiinni liitäntänapoihin.

Attention

Avant d'accéder à cet équipement connecté aux lignes électriques, ôter tout bijou (anneaux, colliers et montres compris). Lorsqu'ils sont branchés à l'alimentation et reliés à la terre, les objets métalliques chauffent, ce qui peut provoquer des blessures graves ou souder l'objet métallique aux bornes.

Warnung

Vor der Arbeit an Geräten, die an das Netz angeschlossen sind, jeglichen Schmuck (einschließlich Ringe, Ketten und Uhren) abnehmen. Metallgegenstände erhitzen sich, wenn sie an das Netz und die Erde angeschlossen werden, und können schwere Verbrennungen verursachen oder an die Anschlußklemmen angeschweißt werden.

Figyelem!

Mielőtt hálózati feszültséghez csatlakozó készülékkel kezd el dolgozni, vegye le magáról az ékszereket (például gyűrűt, nyakláncot, órát). A fém tárgyak felmelegszenek, ha hálózati feszültséghez és földhöz érnek, és súlyos égési sérülést okozhatnak, illetve a fém tárgyak hozzáforrhathatnak a csatlakozókhoz.

Avvertenza	Prima di intervenire su apparecchiature collegate alle linee di alimentazione, togliersi qualsiasi monile (inclusi anelli, collane, braccialetti ed orologi). Gli oggetti metallici si riscaldano quando sono collegati tra punti di alimentazione e massa: possono causare ustioni gravi oppure il metallo può saldarsi ai terminali.
Advarsel	Fjern alle smykker (inkludert ringer, halskjeder og klokker) før du skal arbeide på utstyr som er koblet til kraftledninger. Metallgjenstander som er koblet til kraftledninger og jord blir svært varme og kan forårsake alvorlige brannskader eller smelte fast til polene.
Aviso	Antes de trabalhar em equipamento que esteja ligado a linhas de corrente, retire todas as jóias que estiver a usar (incluindo anéis, fios e relógios). Os objectos metálicos aquecerão em contacto com a corrente e em contacto com a ligação à terra, podendo causar queimaduras graves ou ficarem soldados aos terminais.
¡Advertencia!	Antes de operar sobre equipos conectados a líneas de alimentación, quitarse las joyas (incluidos anillos, collares y relojes). Los objetos de metal se calientan cuando se conectan a la alimentación y a tierra, lo que puede ocasionar quemaduras graves o que los objetos metálicos queden soldados a los bornes.
Varning!	Tag av alla smycken (inklusive ringar, halsband och armbandsur) innan du arbetar på utrustning som är kopplad till kraftledningar. Metallobjekt hettas upp när de kopplas ihop med ström och jord och kan förorsaka allvarliga brännskador; metallobjekt kan också sammansvetsas med kontakterna.
Предупреждение	Прежде чем использовать оборудование, подключенное к электросети, снимите все украшения (включая кольца, ожерелья и часы). Металлические части нагреваются при соединении с источником питания и землей, что может привести к серьезным ожогам или привариванию металлических объектов к клеммам.

警告 在操作与电源线连接的设备以前，请取下首饰（包括戒指、项链和手表）。连接电源和接地后，金属物品会升温，可能导致严重灼伤，也可能使金属物品熔接在线端。

警告 電源に接続されている装置を取り扱う際は、事前に、指輪、ネックレス、腕時計などの装身具をはずしてください。金属のオブジェクトが電源とアースと接触すると、金属が過熱して大やけどをしたり、また金属類が端子に焼き付くことがあります。

Main Disconnecting Device



Warning

The plug-socket combination must be accessible at all times, because it serves as the main disconnecting device.

Waarschuwing

De combinatie van de stekker en het elektrisch contactpunt moet te allen tijde toegankelijk zijn omdat deze het hoofdmecanisme vormt voor verbreking van de aansluiting.

Varoitus

Pistoke/liitinkohta toimii pääkatkaisumekanismina. Pääsy siihen on pidettävä aina esteettömänä.

Attention

La combinaison de prise de courant doit être accessible à tout moment parce qu'elle fait office de système principal de déconnexion.

Warnung

Der Netzkabelanschluß am Gerät muß jederzeit zugänglich sein, weil er als primäre Ausschaltvorrichtung dient.

Figyelem!

A dugaszolóaljzat és a dugasz együttesének mindig hozzáférhetőnek kell lennie, mivel ez szolgál főmegszakítóként.

Avvertenza

Il gruppo spina-presa deve essere sempre accessibile, poiché viene utilizzato come dispositivo di scollegamento principale.

Advarsel	Kombinasjonen støpsel/uttak må alltid være tilgjengelig ettersom den fungerer som hovedfrakoplingsenhet.
Aviso	A combinação ficha-tomada deverá ser sempre acessível, porque funciona como interruptor principal.
¡Advertencia!	El conjunto de clavija y toma ha de encontrarse siempre accesible ya que hace las veces de dispositivo de desconexión principal.
Varning!	Man måste alltid kunna komma åt stickproppen i uttaget, eftersom denna koppling utgör den huvudsakliga fråkopplingsanordningen.
Предупреждение	Штепсельная розетка всегда должна быть доступна, поскольку она служит основным устройством отключения.
警告	插销和插座必须便于随时插拔，因为它是主要断电设备。
警告	主要な切断装置となるので、プラグとソケットは常に手が届く場所に置く必要があります。

Overheating Prevention Warning



Warning

To prevent the system from overheating, do not operate it in an area that exceeds the maximum recommended ambient temperature of: 40°C (104°F)

Waarschuwing

Om te voorkomen dat het systeem oververhit raakt, dient u het niet te gebruiken in een ruimte waar de maximaal aanbevolen omgevingstemperatuur van 40°C (104°F) wordt overschreden.

■ Overheating Prevention Warning

Varoitus	Jotta järjestelmä ei kuumentuisi liikaa, sitä ei saa käyttää liian kuumassa ympäristössä. Suosituksen mukainen käyttölämpötila on enintään 40°C (104°F)
Attention	Pour éviter toute surchauffe du système, il est recommandé de maintenir une température ambiante inférieure à 40°C (104°F)
Warnung	Um das System vor Überhitzung zu schützen, vermeiden Sie dessen Verwendung in einem Bereich, in dem die Umgebungstemperatur das empfohlene Maximum von 40°C (104°F) überschreitet.
Figyelem!	A túlmelegedés megelőzése végett ne üzemeltesse a rendszert olyan területen, ahol a hőmérséklet meghaladja a 40°C (104°F) maximális ajánlott környezeti hőmérsékletet.
Avvertenza	Per evitare che il sistema si surriscaldi, non utilizzatelo dove la temperatura ambiente sia superiore alla temperatura massima raccomandata di 40°C (104°F)
Advarsel	For å hindre at systemet blir overopphetet, må det ikke brukes på et sted der temperaturen overstiger den maksimalt anbefalte temperaturen på 40°C (104°F)
Aviso	Para evitar o sobreaquecimento do sistema, não o opere em áreas que excedam a temperatura ambiente máxima recomendada de 40°C (104°F)
¡Advertencia!	Para impedir que el sistema se recaliente, no lo utilice en zonas en las que la temperatura ambiente llegue a los 40°C (104°F)
Varning!	Förhindra att systemet överhettas genom att inte använda det på en plats där den rekommenderade omgivningstemperaturen överstiger 40°C (104°F)

Предупреждение	Во избежание перегрева устройства его не следует использовать в помещениях, в которых температура воздуха выше максимальной рекомендованной: 40°C (104°F)
警告	为了防止系统过热，不要在超过所建议的最大环境温度下运行该系统： 40°C (104°F)
警告	システムが過熱状態にならないようにするため、最大気温が以下の温度を超える場所ではシステムを稼働させないでください。 40°C (104°F)

TN Power Warning



Warning

The device is designed to work with TN power systems.

Waarschuwing

Het apparaat is ontworpen om te functioneren met TN energiesystemen.

Varoitus

Koje on suunniteltu toimimaan TN-sähkövoimajärjestelmien yhteydessä.

Attention

Ce dispositif a été conçu pour fonctionner avec des systèmes d'alimentation TN.

Warnung

Das Gerät ist für die Verwendung mit TN-Stromsystemen ausgelegt.

Figyelem!

A készülék TN tápellátással működik.

Avvertenza

Il dispositivo è stato progettato per l'uso con sistemi di alimentazione TN.

Advarsel

Utstyret er utfomet til bruk med TN-strømsystemer.

■ Circuit Breaker Warning

Aviso O dispositivo foi criado para operar com sistemas de corrente TN.

¡Advertencia! El equipo está diseñado para trabajar con sistemas de alimentación tipo TN.

Varning! Enheten är konstruerad för användning tillsammans med elkraftssystem av TN-typ.

Предупреждение Устройство предназначено для работы с системами электропитания без непосредственного заземления (TN-система).

警告 此设备设计用于 TN 电源系统。

警告 この装置は、TN 電源システムで動作するように設計されています。

Circuit Breaker Warning



Warning

This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective device is rated not greater than: 15A minimum, 60VDC

Waarschuwing

Dit product is afhankelijk van de installatie van het gebouw voor beveiliging tegen kortsluiting (overstroom). Controleer of de beschermingsinrichting niet meer dan: 15A minimum, 60VDC is.

Varoitus

Tämä tuote on riippuvainen rakennukseen asennetusta oikosulkusuojauksesta (ylivirtasuojauksesta). Varmista, että suojalaitteen mitoitus ei ole yli: 15A minimum, 60VDC

Attention	Pour ce qui est de la protection contre les courts-circuits (surtension), ce produit dépend de l'installation électrique du local. Vérifiez que le courant nominal du dispositif de protection n'est pas supérieur à : 15A minimum, 60VDC
Warnung	Dieses Produkt ist darauf angewiesen, dass im Gebäude ein Kurzschluss- bzw. Überstromschutz installiert ist. Stellen Sie sicher, dass der Nennwert der Schutzvorrichtung nicht mehr als: 15A minimum, 60VDC beträgt.
Figyelem!	A termék védelmi rendszerének része az épület kábelezésébe épített rövidzárlat (túláram) elleni védelem is. Gondoskodjon róla, hogy a készüléket védő eszköz legfeljebb 15A minimum, 60VDC áramerősségre legyen méretezve.
Avvertenza	Questo prodotto dipende dall'impianto dell'edificio per quanto riguarda la protezione contro cortocircuiti (sovracorrente). Assicurarsi che il dispositivo di protezione non abbia un rating superiore a: 15A minimum, 60VDC
Advarsel	Dette produktet er avhengig av bygningens installasjoner av kortslutnings (overstrøm)-beskyttelse. Påse at verneenheten ikke er merket høyere enn: 15A minimum, 60VDC
Aviso	Este produto depende das instalações existentes para proteção contra curto-circuito (sobrecarga). Assegure-se de que o fusível ou disjuntor não seja superior a: 15A minimum, 60VDC
¡Advertencia!	Este equipo utiliza el sistema de protección contra cortocircuitos (o sobrecorrientes) del edificio. Asegúrese de que el dispositivo de protección no sea superior a: 15A minimum, 60VDC
Varning!	Denna produkt är beroende av i byggnaden installerat kortslutningsskydd (överströmsskydd). Kontrollera att skyddsanordningen inte har högre märkvärde än: 15A minimum, 60VDC

Voltage Warning

Предупреждение	Защита устройства от короткого замыкания (перегрузки) осуществляется с помощью оборудования, являющегося частью электропроводки здания. Убедитесь, что номинал защитного устройства не превышает: 15A minimum, 60VDC
警告	此产品的短路（过载电流）保护由建筑物的供电系统提供。确保短路保护设备的额定电流不大于： 15A minimum, 60VDC
警告	この製品は、設置する建物にショート（過電流）保護機構が備わっていることを前提に設計されています。保護装置の定格が以下の値を超えないことを確認してください。 15A minimum, 60VDC

Voltage Warning



Warning

A voltage mismatch can cause equipment damage and may pose a fire hazard. If the voltage indicated on the label is different from the power outlet voltage, *do not connect the chassis to that receptacle.*

Waarschuwing

Aansluiting op een verkeerd voedingsvoltage kan beschadiging van de apparatuur veroorzaken en tot brandgevaar leiden. *Het chassis mag niet aangesloten worden als de spanning die op het label staat aangegeven, anders is dan de spanning van het stopcontact.*

Varoitus

Erisuuruisten jännitteiden yhdistäminen voi aiheuttaa laitevaurion ja tulipalon vaaran. Jos tarraan merkitty jännite eroaa pistorasian jännitteestä, *älä yhdistä asennuspohjaa pistorasiaan.*

Attention

Une erreur de voltage risque d'endommager l'appareil et constitue un risque d'incendie. Si la tension indiquée sur l'étiquette est différente de la tension de l'alimentation, *ne connectez en aucun cas le châssis à la prise.*

Warnung	Bei nicht übereinstimmender Spannung kann es zu Geräteschäden und Feuergefahr kommen. Wenn die auf dem Etikett angegebene Spannung nicht mit der Steckdosenspannung übereinstimmt, schließen Sie das Gerät nicht an diese Steckdose an.
Figyelem!	Ha a feszültség különbözik az előírtól, a készülék megsérülhet, vagy tűz keletkezhet. Ha a címkén feltüntetett feszültség különbözik a konnektor feszültségétől, akkor ne csatlakoztassa a házat a konnektorhoz.
Avvertenza	Una tensione inadeguata può causare danni all'apparecchio e rischio di incendio. Se la tensione riportata sulla targhetta è diversa da quella della presa di alimentazione, <i>non collegare lo chassis a tale presa.</i>
Advarsel	Ulik spenning kan forårsake skade på utstyret og innebære brannfare. Dersom spenningen på merkelappen er forskjellig fra spenningen i stikkontakten, <i>må du ikke koble kabinettet til den stikkontakten.</i>
Aviso	Uma voltagem incorrecta poderá causar danos no equipamento e constituir um risco de incêndio. Se a voltagem indicada na etiqueta for diferente da voltagem de saída de corrente da parede, <i>não ligue o chassis a esse receptáculo.</i>
¡Advertencia!	Las diferencias en el voltaje pueden causar daños a los equipos y presentar peligro de incendio. Si el voltaje indicado en la etiqueta es diferente al de la toma de alimentación, no conectar el chasis a dicha toma.
Varning	Inkompatibla spänningar kan resultera i materiella skador samt utgör brandfara. Om den spänning som anges på etiketten skiljer sig från strömuttagets spänning <i>ska chassit inte anslutas till detta uttag.</i>
Предупреждение	Несоответствие напряжения может привести к повреждению оборудования и возгоранию. Не подключайте устройство к розетке электропитания, если напряжение, указанное на ярлыке, отличается от напряжения в этой розетке.

Lightning Activity Warning

- 警告** 电压失配可能造成设备损坏并引起火灾。如果标签上标明的电压与电源插座的电压不同，请勿将机架连接到该插座上。
- 警告** 電圧が一致していないと、装置の損傷や火災を引き起こすおそれがあります。ラベルに記載された電圧がコンセントの電圧と異なる場合は、シャーシをそのレセプタクルに接続しないでください。
-

Lightning Activity Warning



Warning

Do not work on the system or connect or disconnect cables during periods of lightning activity.

Waarschuwing

Tijdens onweer dat gepaard gaat met bliksem, dient u niet aan het systeem te werken of kabels aan te sluiten of te ontkoppelen.

Varoitus

Älä työskentele järjestelmän parissa äläkä yhdistä tai irrota kaapeleita ukkosilmalla.

Attention

Ne pas travailler sur le système ni brancher ou débrancher les câbles pendant un orage.

Warnung

Arbeiten Sie nicht am System und schließen Sie keine Kabel an bzw. trennen Sie keine ab, wenn es gewittert.

Figyelem!

Villámlás közben ne dolgozzon a rendszeren, valamint ne csatlakoztasson és ne húzzon ki kábeleket!

Avvertenza

Non lavorare sul sistema o collegare oppure scollegare i cavi durante un temporale con fulmini.

Advarsel	Utfør aldri arbeid på systemet, eller koble kabler til eller fra systemet når det tordner eller lyner.
Aviso	Não trabalhe no sistema ou ligue e desligue cabos durante períodos de mau tempo (trovoada).
¡Advertencia!	No operar el sistema ni conectar o desconectar cables durante el transcurso de descargas eléctricas en la atmósfera.
Varning!	Vid åska skall du aldrig utföra arbete på systemet eller ansluta eller koppla loss kablar.
Предупреждение	Не следует работать с устройством, а также подключать или отключать кабели во время грозы.
警告	请勿在发生雷电时操作系统，也不要在此期间连接或断开电缆。
警告	雷が発生しているときは、システムに手を加えたり、ケーブルの接続や取り外しを行わないでください。

Product Disposal Warning



Warning

Ultimate disposal of this product should be handled according to all national laws and regulations.

Waarschuwing

Het uiteindelijke wegruimen van dit product dient te geschieden in overeenstemming met alle nationale wetten en reglementen.

Varoitus

Tämä tuote on hävitettävä kansallisten lakien ja määräysten mukaisesti.

■ Product Disposal Warning

Attention La mise au rebut ou le recyclage de ce produit sont généralement soumis à des lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.

Warnung Die Entsorgung dieses Produkts sollte gemäß allen Bestimmungen und Gesetzen des Landes erfolgen.

Figyelem! A készülék végső elhelyezéséről az adott országban érvényes törvények és előírások szerint kell intézkedni.

Avvertenza Lo smaltimento di questo prodotto deve essere eseguito secondo le leggi e regolazioni locali.

Advarsel Endelig kassering av dette produktet skal være i henhold til alle relevante nasjonale lover og bestemmelser.

Aviso Deitar fora este produto em conformidade com todas as leis e regulamentos nacionais.

¡Advertencia! Al deshacerse por completo de este producto debe seguir todas las leyes y reglamentos nacionales.

Varning! Vid deponering hanteras produkten enligt gällande lagar och bestämmelser.

Предупреждение Окончательная установка данного изделия должна выполняться в соответствии со всеми региональными и местными правилами и нормами.

警告 本产品的废弃处理应根据所有国家的法律和规章进行。

警告 この製品を廃棄処分する際は、各国の法律および規制に従って取り扱ってください。

No On/Off Switch Warning

**Warning**

Unplug the power cord before you work on a system that does not have an on/off switch.

Waarschuwing

Voordat u aan een systeem werkt dat geen aan/uit schakelaar heeft, dient u de stekker van het netsnoer uit het stopcontact te halen.

Varoitus

Ennen kuin teet mitään sellaiselle järjestelmälle, jossa ei ole kaksiasentokytkintä, kytke irti virtajohto.

Attention

Avant de travailler sur un système non équipé d'un commutateur marche-arrêt, débrancher le cordon d'alimentation.

Warnung

Bevor Sie an einem System ohne Ein/Aus-Schalter arbeiten, ziehen Sie das Netzkabel heraus.

Figyelem!

Húzza ki a tápkábelt, mielőtt egy olyan készüléken kezd el dolgozik, amelynek nincs ki/bekapcsoló gombja.

Avvertenza

Prima di lavorare su un sistema che non è dotato di un interruttore on/off, scollegare il cavo di alimentazione.

Advarsel

Før det skal utføres arbeid på et system som ikke har en av/på-bryter, skal strømledningen trekkes ut.

Aviso

Antes de começar a trabalhar num sistema que não possui um interruptor ON/OFF, desligue o cabo de alimentação.

¡Advertencia!

Antes de trabajar sobre cualquier sistema que carezca de interruptor de Encendido/Apagado (ON/OFF), desenchufar el cable de alimentación.

Varning!

Dra ur nätsladden innan du utför arbete på ett system utan strömbrytare.

No On/Off Switch Warning

Предупреждение Выдерните вилку шнура питания из розетки, прежде чем приступить к работе с оборудованием, в котором отсутствует выключатель.

警告 在操作没有切换开关的系统以前，请拔出电源线。

警告 オン/オフ・スイッチを備えていないシステムで作業を行うときは、事前に電源コードをはずしてください。
